

## 2D Long Range Barcode Scanner

- MS852LR -



**User's Manual**

---

Version 1.3

## Change Log

<b>Date</b>	<b>Change Description</b>	<b>Version</b>
2020/04/23	first published version	1.0
2020/05/21	Update chapter one	1.1
2020/07/14	Add information about Illumination Capture	1.2
2023/02/24	Update 1.3 Specifications – Operating Temperature	1.3

## Preface

### About This Manual

---

Thank you for purchasing the Unitech product.  
This manual explains how to install, operate and maintain our product.  
No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, such as photocopying, recording, or information storage and retrieval systems, without permission in writing from the manufacturer. The material in this manual is subject to change without notice. All product and company names are trademarks, service marks, or registered trademarks of their respective owners.

### Regulatory Compliance Statements

---



#### FCC Warning Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

–Consult the dealer or an experienced radio/TV technician for help.

1. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure requirements, avoid direct contact to the transmitting antenna during transmitting.
3. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Operation on the 5.15 - 5.25GHz frequency band is restricted to indoor use only. The FCC requires indoor use for the 5.15-5.25GHz band to reduce the potential for harmful interference to co-channel Mobile Satellite Systems. Therefore, it will only transmit on the 5.25-5.35 GHz, 5.47-5.725 GHz and 5.725 - 5.850 GHz band when associated with an access point (AP).

## FCC Label Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## RF Radiation Exposure Statement

For body contact during operation, this device has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

## Canadian Compliance Statement

This Class B Digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte les exigences du Règlement

sur le matériel broilleur du Canada.

## European Conformity Statement

Unitech Electronics Co., Ltd. herewith declares that the Unitech product is in compliance with the essential requirements and all other provisions of the RED 2014/53/EU directive, the EMC 2014/30/EU directive and the Low Voltage 2014/35/EU directive.

The declaration of conformity is available for download at :

<https://portal.Unitech.eu/public/Safetyregulatorystatement>

## CE RF Exposure Compliance

This device meets EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

For body-worn operation, this device has been tested and meets the ICNIRP guidelines and the European Standard EN 62209-2, for use with dedicated accessories, SAR is measured with this device at a separation of 0.5 cm to the body, while transmitting at the highest certified output power level in all frequency bands of this device. Use of other accessories which contain metals may not ensure compliance with ICNIRP exposure guidelines.

## CE Mark Warning



This equipment complies with the requirements of Directive 2014/53/EU of the European Parliament and Commission from 24 May, 2014 governing Radio and Telecommunications Equipment and mutual recognition of conformity.

## RoHS Statement



This device conforms to RoHS (Restriction of Hazardous Substances) European Union regulations that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

## Waste electrical and electronic equipment (WEEE)



Unitech has set up a policy and process to meet the EU directive 2002/96/EC and update 2003/108/EC concerning electronic waste disposal.

For more detailed information of the electronic waste disposal of the products you have purchased from Unitech directly or via Unitech's resellers, you shall either contact your local supplier or visit us at :

<https://portal.Unitech.eu/public/WEEE>

## Taiwan NCC Warning Statement

### 低功率電波輻射性電機管理辦法

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。應避免影響附近雷達系統之操作。高增益指向性天線只得應用於固定式點對點系統。

SAR標準值 W/KG, 送測產品實測值為: (W/KG)

#### 注意事項:

1. 使用過度恐傷害視力。
2. 使用30分鐘請休息10分鐘；2歲以下幼兒不看螢幕，2歲以上每天看螢幕不要超過1小時。
3. 減少電磁波影響，請妥適使用。

## Laser Information

---

The Unitech product is certified in the U.S. to conform to the requirements of DHHS/CDRH 21CFR Subchapter J and to the requirements of IEC 825-1. Class II and Class 2 products are not considered to be hazardous. The Unitech product contains internally a Visible Laser Diode (VLD) whose emissions do not exceed the maximum limits as set forth in the above regulations. The scanner is designed so that there is no human access to harmful laser light during normal operation, user maintenance or prescribed service operations.

The laser safety warning label required by the DHHS/IEC for the Unitech product's optional laser scanner module is located on the memory compartment cover, on the back of the unit.

\* Laser information only applies to the products with laser components.

**CAUTION!** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light. Use of optical instruments with the scanner, including binoculars, microscopes, and magnifying glasses, with will increase eye damage. This does not include eyeglasses worn by the user.

## LED Information

---

The Unitech product contains LED indicator(s) or LED ring whose luminance is not harmful to human eyes during normal operation, user maintenance or prescribed service operations.

\*LED information only applies to the products with LED components.



## Battery Notice

---

1. To guarantee optimal performance, it is recommended that rechargeable batteries be replaced every year, or after 500 charging cycles are completed. It is normal for the battery to balloon or expand after one year or 500 cycles. Although it does not cause damage, it cannot be used again and must be disposed of according to the location's safe battery disposal procedures.
2. If a battery performance decreases more than 20%, the battery is at the end of its life cycle. Stop use and ensure the battery is disposed of properly.
3. The length of time that a battery lasts depends on the battery type and how the device is used. Conserve the battery life by doing the following:
  - Avoid fully uncharging the battery because this places additional strain on it. Several partial uncharges with frequent charges are better than a fully uncharged battery. Charging a partially charged battery does not cause harm to the unit.
  - Keep the battery cool. Avoid hot vehicles. For prolonged storage, keep the battery at a 40% charge level.
  - Do not leave the battery uncharged and unused for an extended period of time, the battery will wear out and the longevity of the battery will be at least half of one with frequent charges.
4. Protect battery life by not over or under charging the battery.
5. Please do not leave battery unused for long time without charging it. Despite Unitech's safety precautions, the battery pack may begin to change shape. If so, stop using it immediately. Please check to see if you are using a proper power adapter to charge the battery or contact your service provider for service.
6. If you cannot charge the battery after it has been idle for an extended period of time and it begins to heat up, please do not try to charge it. It may not be functional anymore.
7. Please only use the original battery from Unitech. Using a third party battery can damage our products. Please note that when such damage occurs, it is not covered by your warranty.

**CAUTION!**

- RISK OF EXPLOSION IF BATTERY IS REPLACED INCORRECTLY. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- 電池若未正確更換，可能會爆炸。請用原廠建議之同款或同等級的電池來更換。請依原廠指示處理廢電池。請依製造商說明書處理用過之電池
- 如果更換不正確之電池行事會有爆炸的風險。請依製造商說明書處理用過之電池

**Battery charge notice**

It is important to consider temperature when the battery pack is charging. Charging is most efficient at normal room temperature or in a slightly cooler environment. It is essential that batteries are charged within the stated range of 0°C to 40°C. Charging batteries outside of the specified range could damage the batteries and shorten their life cycle.

**CAUTION!** Do not charge batteries at a temperature lower than 0°C. This will make the batteries unstable and dangerous. Please use a battery temperature detecting device for a charger to ensure a safe charging temperature range.

**CAUTION!** To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.

**CAUTION!** If the connector is damaged, please ensure the connector is being fully repaired before use the unit to avoid causing short circuited.

## Storage and safety notice

Although charged batteries may be left unused for several months, their capacity may be depleted due to build up of internal resistance. If this happens, they will require recharging prior to use. Batteries may be stored at temperatures between -20°C to 60°C, however they may deplete more rapidly at higher temperatures. It is recommended to store batteries at room temperature.

*\* The message above only applies to the usage of the removable batteries.  
For the products with non-removable batteries / without batteries, please refer to the specification of each product.*

## Product Operation and Storage Notice

The Unitech product has applicable operation and storage temperature conditions. Please follow the limitation of suggested temperature conditions to avoid failure, damage or malfunction.

*\* For applicable temperature conditions, please refer to the specification of each product.*

## Adapter Notice

---

1. Please do not leave the power adapter in the socket when it is not connected to your Unitech product for charging.
2. Please remove the power adapter when the battery is fully recharged.
3. The bundled power adapter that comes with your Unitech product is not meant to be used outdoors. An adapter exposed to water or rain, or a very humid environment can cause damage to both the adapter and the product.
4. Please only use the bundled power adapter or same specification of adapter to charge your Unitech product. Using the wrong power adapter can damage your Unitech product.

*\* The message above only applies to the product connected to the adapter.  
For the products without using the adapters, please refer to the specification of each product.*

## Hearing Damage Warning

---

To prevent possible hearing damage, do not listen at high volume levels for long periods.



Figure 1 – Warning label (IEC 60417-6044)

## Worldwide Support

Unitech's professional support team is available to quickly answer questions or assist with technical-related issues. Should an equipment problem occur, please contact the nearest Unitech regional service representative.

For complete contact information please visit the Web sites listed below:

<b>Taipei, Taiwan – Headquarters</b>  <b>Tel:</b> +886-2-89121122 <b>E-mail:</b> info@hq.ute.com <b>Address:</b> 5F, No. 136, Lane 235, Baoqiao Road, Xindian District, New Taipei City 231, Taiwan (R.O.C.) <b>Website:</b> <a href="http://www.ute.com">http://www.ute.com</a>	<b>Europe</b>  <b>Tel:</b> +31-13-4609292 <b>E-mail:</b> info@eu.ute.com <b>Address:</b> Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands <b>Website:</b> <a href="http://eu.ute.com">http://eu.ute.com</a>
<b>China</b>  <b>Tel:</b> +86-59-2310-9966 <b>E-mail:</b> info@cn.ute.com <b>Address:</b> Room401C, 4F, RIHUA International Mansion, Xinfeng 3rd Road, Huoju Hi-tech District, Xiamen, Fujan , China <b>Website:</b> <a href="http://cn.ute.com">http://cn.ute.com</a>	<b>Japan</b>  <b>Tel:</b> +81-3-62310896 <b>E-mail:</b> info@jp.ute.com <b>Address:</b> Tosei Building 3F.,18-10 Nihonbashi-Hakozakicho, Cyuouku, Tokyo, 103-0015, Japan <b>Website:</b> <a href="http://jp.ute.com">http://jp.ute.com</a>
<b>Asia &amp; Pacific / Middle East</b>  <b>Tel:</b> +886-2-27911556 <b>E-mail:</b> info@apac.ute.com info@india.ute.com info@mideast.ute.com <b>Address:</b> 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan <b>Website:</b> <a href="http://apac.ute.com">http://apac.ute.com</a> / <a href="http://mideast.ute.com">http://mideast.ute.com</a>	<b>Latin America</b>  <b>Tel:</b> +52-55-5171-0528 <b>E-mail:</b> info@latin.ute.com <b>Address:</b> 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) <b>Website:</b> <a href="http://latin.ute.com">http://latin.ute.com</a>
<b>North America</b>  <b>Tel:</b> +1-714-8916400 <b>E-mail:</b> info@us.ute.com / info@can.ute.com <b>Address:</b> 6182 Katella Ave, Cypress, CA 90630, USA <b>Website:</b> <a href="http://us.ute.com">http://us.ute.com</a>	<b>Please scan QR Code to visit us :</b>  

## Warranty Policy

---

The following items covered under the Unitech Limited Warranty are free from defects during normal use:

The warranty period is varied from each country. Please consult with your supplier or Unitech local office for actual length of warranty period to your purchased product.

Warranty becomes void if equipment is modified, improperly installed or used, damaged by accident or neglect, or if any parts are improperly installed or replaced by the user.

# Table of Contents

<b>Preface</b> .....	<b>i</b>
About This Manual .....	i
Regulatory Compliance Statements .....	i
Laser Information .....	vi
LED Information .....	vi
Battery Notice.....	vii
Adapter Notice.....	x
Hearing Damage Warning .....	x
Worldwide Support .....	xi
Warranty Policy .....	xii
<b>Chapter 1 - Overview</b> .....	<b>1</b>
1.1 Package .....	1
1.2 Product Detail.....	2
1.3 Specifications .....	3
1.4 Getting Started .....	6
1.5 LED Indicator / Beeper Sequence .....	7
<b>Chapter 2 – Command Settings</b> .....	<b>8</b>
2.1 General setting .....	8
2.2 USB Interface Setting.....	10
2.3 Beep & Indicator Setting.....	20
2.4 Trigger Mode .....	25
2.5 Picklist Mode .....	27
2.6 Continuous Bar Code Read.....	28
2.7 Unique Bar Code Reporting .....	28
2.8 Mirrored Image .....	29
2.9 Decode Session Timeout.....	30
2.10 Timeout Between Decodes, Same Symbol .....	31
2.11 Timeout Between Decodes, Different Symbols.....	32
2.12 PDF Prioritization .....	33

2.13 Mobile Phone/Display Mode .....	34
2.14 Transmit “No Read” Message.....	34
2.15 Prefix/Suffix Values.....	35
2.16 Scan Data Transmission Format .....	36
2.17 Transmit Code ID Character.....	37
2.18 Miscellaneous Decoder Parameters.....	38
2.19 Baud Rate .....	39
2.20 Parity .....	40
2.21 Hardware Handshaking .....	43
2.22 Set Bar Codes Enable/Disable .....	48
2.23 Parameter barcode scanning .....	48
2.24 Lock/Unlock Parameter Scanning .....	49
2.25 Validate Concatenated Parameter Bar Codes.....	50
2.26 Intercharacter Delay .....	51
<b>Chapter 3 – Symbology .....</b>	<b>52</b>
3.1 UPC/EAN/JAN.....	52
3.2 Code 39.....	79
3.3 Code 93.....	86
3.4 Code 11 .....	89
3.5 Interleaved 2 of 5 (ITF).....	94
3.6 Discrete 2 of 5 (DTF).....	102
3.7 Codabar (NW - 7) .....	104
3.8 MSI.....	109
3.9 Chinese 2 of 5 .....	115
3.10 Matrix 2 of 5.....	115
3.11 Inverse 1D .....	119
3.12 GS1 DataBar .....	120
3.13 Symbology-Specific Security Features .....	126
3.14 Composite .....	131
3.15 Composite Beep Mode .....	134
3.16 GS1-128 Emulation Mode for UCC/EAN Composite Codes.....	135
3.17 Korean 3 of 5.....	135
3.18 2D Symbologies .....	136
3.19 Macro PDF Features .....	148
3.20 DotCode .....	158



<b>Appendix A – ASCII Character Sets</b> .....	160
A-1 ASCII Character Set.....	160
A-2 ALT Key Character Set .....	164
A-3 GUI Key Character Set .....	165
A-4 PF Key Character Set.....	166
A-5 F Key Character Set .....	167
A-6 Numeric Key Character Set .....	168
A-7 Extended Key Character Set .....	169
<b>Appendix B – Numeric Barcodes</b> .....	170
B-1 Cancel.....	170
B-2 Numeric Barcodes .....	170
<b>Appendix C – Alphanumeric BarCodes</b> .....	171
C-1 Alphanumeric Barcodes.....	171
<b>Appendix D – Programming Reference</b> .....	178
D-1 Symbol Code Identifiers.....	178
D-2 AIM Code Identifiers .....	179

# Chapter 1 - Overview

## 1.1 Package

---

Please make sure the following contents are in the MS852LR gift box. If something is missing or damaged, please contact your Unitech representative.

### The standard package contents:

- MS852LR 2D Long Range Barcode Scanner
- USB Interface Cable
- Y cable  
Y cable is designed for the PC or notebook without USB 3.0 port in order to get additional power supply from two USB 2.0 ports. Or you can just connect MS852LR to a USB 3.0 port directly without Y cable.
- Quick Start Guide
- Regulatory Compliance Statements

**NOTE: The barcode with an asterisk (\*) which appears in the following chapters indicates that it is the default option for the corresponding setting.**

## 1.2 Product Detail

---



# 1.3 Specifications

<b>Optical &amp; Performance</b>	
Sensor	CMOS sensor
Aiming Element	655nm
Illumination	Hyper Red 660nm
Ambient Light	10000 ft. candles (107,639 lux)
Skew Angle	± 60°
Pitch Angle Sensor	± 60°
Roll Angle	0 - 360°
Minimum Resolution	3.0 mil (Code 39), 5.0 mil (PDF417)
Printing Contrast Scale	Minimum 25%
Imager Field of View	Near camera: 32° horizontal, 20° vertical Far camera: 12° horizontal, 7.6° vertical
Image Sensor Resolution	1280 horizontal X 800 vertical pixels
Depth of Field (DOF PCS=80%)	SYMBOLGY / X-DIM TYPICAL RANGE* Near Far(inches/centimeters) 10 mil Code 39 3.0/7.6 * 85.0/215.9 13 100% UPC 3.5/8.9 90.0/228.6 15 mil Code 128 6.0/15.2 * 100.0/254.0 20 mil Code 39 4.0/10.2 * 172.0/436.9 40 mil Code 39 6.0/15.2 * 340.0/863.6 ** 55 mil Code 39 7.0/17.8 * 430.0/1092.2 ** 100 mil Code 39 (paper) 20.0/50.8 * 700.0/1778.0 ** 100 mil Code 128 (reflective) 30.0/76.2 * 700.0/1778.0 DataMatrix 10 5.0/12.7 45.0/114.3 DataMatrix 55 5.0/12.7 250.0/635.0 15 mil Code 128 (4 in. wide) 8.0/20.3 * 100.0/254.0 100 mil QR Code 15.7in / 40.0 cm 820.7 in / 2085.0 cm
<b>Communication</b>	
Host Interface supported	USB

OPOS / JavaPOS	Supported
<b>Mechanical</b>	
Dimension	87.8mm x 177.7mm x71.6 mm (L x H X W)
Weight	184g
<b>Functionality</b>	
Symbologies	<p><b>1D:</b> Code 39, Full ASCII, Code 32, Italian Pharmacode, Trioptic, Code 128, EAN-128, ISBT-128, Codabar, Code 11, Matrix 2 of 5, Chinese Matrix 2 of 5, UPC/EAN, UPCA, UPCE, UPCE1, EAN-8, EAN-13, Bookland/ISBN, ISSN, Coupon Code, Interleaved 2 of 5, Discrete 2 of 5, IATA, Databar, Code 93, MSI, UK Plessey, Telepen</p> <p><b>2D:</b> PDF Standard, Macro PDF, Micro PDF, Macro Micro PDF, Composite, TLC-39, Aztec, Data Matrix, QR Standard, Micro QR, GS1 QR, Maxicode, Han Xin, Grid Matrix, DotCode, OCR, Digimarc</p> <p><b>Postal Codes:</b> Japan Postal, Australia Post, Canada Postal, Netherlands KIX Code, US Planet, USPS 4CB/One Code/Intelligent Mail, UPU FICS Postal, Mailmark, French Lottery, Posti4S, Korean 3 of 5</p>
<b>Electrical</b>	
Power Requirement	4VDC to 5.5 VDC
Current Consumption	Operating: 710mA Standby: 79mA
Indicator	LED & Beeper & Vibration (optional)
<b>Environmental</b>	
ESD Protection	Functional after 8K Contact and 15K Air
Mechanical Shock	2.1M onto concrete


Operating Temperature	-20°C to 50°C (-4°F to 122°F)
Storage Temperature	-40°C to +70°C (-40°F to +158°F)
Relative Humidity	5% to 95%, non-condensing
IP Rating	IP42
<b>Regulatory Approvals</b>	
CE, FCC, BSMI, VCCI	

## 1.4 Getting Started

To get started with MS852LR, please connect USB cable to the **USB 3.0** port of a host PC.



**Note :** *Y cable is designed for the PC or notebook without USB 3.0 port in order to get additional power supply from two USB 2.0 ports. Or you can just connect MS852LR to a USB 3.0 port directly without Y cable.*

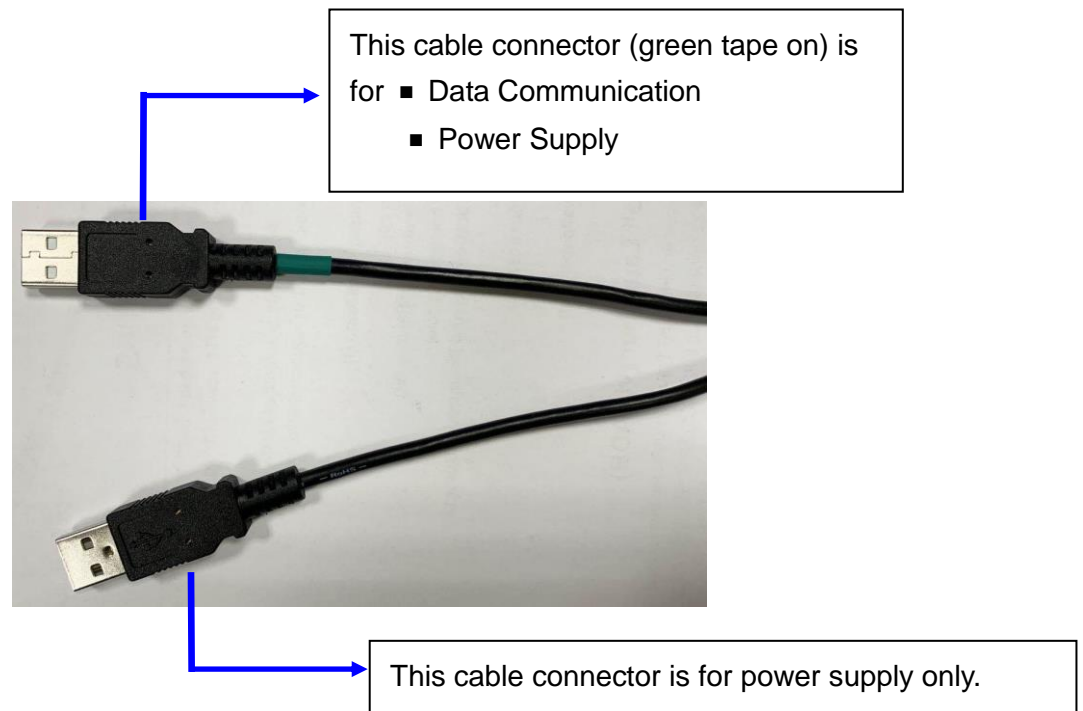

## 1.5 LED Indicator / Beeper Sequence

Description	Indication	
	Beeper	LED
Trigger Pull	No Sound	No Light
No decode		
Wake up		
Decode	Middle Tone	Green Blink
Snapshot started	Low Tone	Blinking
Snapshot is complete	Low Tone	No Light
Power on	Low Tone, Middle Tone, High Tone	No Light
Transmission error	Four Low Tones	No Light
Entry error	Low Tone, High Tone	Green Blink
Defaults set	High Tone, Low Tone, High Tone, Low Tone	Green Blink
Parameter entered		
Number entry expected	High Tone, Low Tone	Green Blink



## Chapter 2 – Command Settings

### 2.1 General setting

---

#### 2.1.1 Factory Default

Scan below bar code to restore the factory setting.

Default



#### 2.1.2 Display F/W Version

Scan below bar code to display F/W version.

Display F/W Version



## 2.1.3 Write to Custom Defaults

To create a set of custom defaults, select the desired parameter values in this guide, and then scan **Write to Custom Defaults**.

Restore Defaults \*



Write to Custom Defaults



Set Factory Defaults



## 2.2 USB Interface Setting

---

### 2.2.1 USB Device Type

USB Keyboard HID



IBM Table-top USB



IBM Hand-held USB



OPOS (IBM Hand-held with Full Disable)



USB CDC Host



SSI over USB CDC



Symbol Native API (SNAPI) with Imaging Interface \*



Symbol Native API (SNAPI) without Imaging  
Interface



USB HID POS(for Windows 10 devices only)



## 2.2.2 USB Static CDC

When disabled, each device connected consumes another COM port (first device = COM1, second device = COM2, third device = COM3, etc.)When enabled, each device connects to the same COM port.

Enable USB Static CDC \*



Disable USB Static CDC



## 2.2.3 USB Country Keyboard Types-Country Codes

Scan the bar code corresponding to the keyboard type. This setting applies only to the USB HID Keyboard Emulation device.

North American Standard USB  
Keyboard\*



French Windows



French Canadian Windows 95/98



Spanish Windows



Portuguese-Brazilian Windows



UK English Windows



German Windows



French Canadian Windows  
2000/XP



French Belgian Windows



Swedish Windows



Japanese Windows (ASCII)



Italian Windows



## 2.2.4 USB Keystroke Delay

Scan one of the following barcodes to set the delay, in milliseconds, between emulated keystrokes. Select a longer delay for hosts that require slower data transmission.

No Delay\*



Medium Delay (20 msec)



Long Delay (40 msec)



## 2.2.5 USB Polling Interval

Scan one of the following barcodes to set the polling interval, which is the rate at which data transmits between the engine and host computer. A lower number indicates a faster data rate.

1 msec



2 msec



3 msec



4 msec



5 msec



6 msec



7 msec



8 msec\*



9 msec



## 2.2.6 USB Caps Lock Override

This option applies only to the USB HID Keyboard device. Scan **Override Caps Lock Key** to preserve the case of the data regardless of the state of the **Caps Lock key**. This setting is always enabled for the Japanese Windows (ASCII) keyboard type and can not be disabled.

Override Caps Lock Key (Enable)



Do Not Override Caps Lock Key \*  
(Disable)



## 2.2.7 Simulated Caps Lock

Scan **Enable Simulated Caps Lock** to invert upper and lower case characters on the barcode as if the Caps Lock state is enabled on the keyboard. This inversion occurs regardless of the keyboard's **Caps Lock** state.

Enable Simulated Caps Lock



Disable Simulated Caps Lock\*



## 2.2.8 Covert Case

Scan below bar code to send / don't send non printable characters to the host.

No Case Conversion\*



Convert All to Upper Case



Convert All to Lower Case





## 2.2.9 Barcodes with unknown Characters

This option applies only to the USB Keyboard HID and IBM devices. Unknown characters are characters the host does not recognize.

Scan Send Barcodes With Unknown Characters to send all barcode data except for unknown characters.

The decoder issues no error beeps. Scan Do Not Send Barcodes With Unknown Characters for IBM devices to prevent sending barcodes containing at least one unknown character to the host, or for USB Keyboard HID devices to send the barcode characters up to the unknown character. The decoder issues an error beep.

Send Barcodes with Unknown Characters\*



Do Not Send Barcodes with Unknown Characters



### 2.2.9.1 USB Convert Unknown to Code 39

This option applies only to the IBM hand-held, IBM table-top, and OPOS devices. Scan one of the following barcodes to enable or disable converting unknown barcode type data to Code 39.

Enable Convert Unknown to Code 39



Disable Convert Unknown to Code 39\*



## 2.2.10 USB Fast HID

Scan Enable USB Fast HID to transmit USB HID data at a faster rate.

Enable USB Fast HID \*



Disable USB Fast HID



## 2.2.11 Keypad Emulation

Scan **Enable Keypad Emulation** to send all characters as ASCII sequences over the numeric keypad. For example, ASCII A transmits as “ALT make” 0 6 5 “ALT Break”.

Enable Keypad Emulation



Disable Keypad Emulation\*



## 2.2.12 Quick Keypad Emulation

This option applies only to the USB HID Keyboard device when **Keypad Emulation** is enabled. Scan Enable Quick Keypad Emulation for a quicker method of emulation using the numeric keypad where ASCII sequences are only sent for ASCII characters not found on the keyboard.

Enable Quick Keypad Emulation\*



Disable Quick Keypad Emulation



## 2.2.13 Keypad Emulation with leading Zero

Scan **Enable Keypad Emulation with Leading Zero** to send character sequences sent over the numeric keypad as ISO characters which have a leading zero. For example, ASCII A transmits as "ALT MAKE" 0 0 6 5 "ALT BREAK".

Enable Keypad Emulation with  
Leading Zero



Disable Keypad Emulation with  
Leading Zero\*



## 2.2.14 Host Serial Response Time-out

This parameter specifies how long the decoder waits for an ACK, NAK, or CTS before determining that a transmission error occurred. This only applies when in one of the ACK/NAK software handshaking modes, or RTS/CTS hardware handshaking mode.

Minimum: 2 Sec \*



Low: 2.5 Sec



Medium: 5 Sec



High: 7.5 Sec



Maximum: 9.9 Sec



## 2.3 Beep & Indicator Setting

---

### 2.3.1 Beep After Good Decode

Scan one of the following bar codes to select whether or not the engine beeps after a good decode. If you select Disable Beep After Good Decode, the beeper still operates during parameter menu scanning and to indicate error conditions.

Enable Beep After Good Decode\*



Disable Beep After Good Decode



### 2.3.2 Beeper volume

Scan one of the following bar codes to select a beeper volume.

Low Volume



Medium Volume



High Volume\*



### 2.3.3 Beep Tone

Scan one of the following bar codes to select a beeper tone for the good decode beep.

Low Tone



Medium Tone\*



High Tone



Disable Beep Tone



### 2.3.4 Beeper Duration

Scan one of the following bar codes to select the duration for the good decode beep.

Short Duration



Medium Duration\*



Long Duration



## 2.3.5 Suppress Power Up Beeps

Scan one of the following bar codes to select whether or not to suppress the engine's power-up beeps.

Do Not Suppress Power Up Beeps\*



Suppress Power Up Beeps



## 2.3.6 Decode LED Behavior

Select one of the following options to control decode LED behavior with respect to low power mode for serial hosts :

- Enable Decode LED** - the decode LED remains on until the scanner enters Low Power Mode. This allows the scanner to enter Low Power Mode quickly, but also have the decode LED light.
- Disable Decode LED** - shuts off the decode LED completely.

Enable Decode LED \*



Disable Decode LED



## 2.3.7 Direct Decode Indicator

This parameter is only supported in Auto Aim and Standard (Level) Trigger Mode. Scan one of the following bar codes to select optional blinking of the illumination on a successful decode.

- \*Disable Direct Decode Indicator - Illumination does not blink on a successful decode.
- 1 Blink - Illumination blinks once upon a successful decode.
- 2 Blinks - Illumination blinks twice upon a successful decode.

Disable Direct Decode Indicator\*



1 Blink



2 Blinks





## 2.3.8 Decoding Illumination

Selecting Enable Decoding Illumination causes the decoder to turn on illumination every image capture to aid decoding. Select Disable Decoding Illumination to prevent the decoder from using decoding illumination. Enabling illumination usually results in superior images. The effectiveness of illumination decreases as the distance to the target increases.

Changing this parameter while using Presentation Mode, with or without Motion Enhancement, is not recommended.

Enable Decoding Illumination\*



Disable Decoding Illumination



### 2.3.8.1 Illumination Capture

The engine can capture images with its near camera only. During image capture, the illumination subsystem may be turned on or off. It is recommended to turn off the LED illumination when taking images of documents. In this case, ensure ambient illumination provides a minimum of 30 fcd on the document surface.

## 2.4 Trigger Mode

---

Scan one of the following bar codes to select a trigger mode for the engine:

- **Trigger\* (Level)** - A trigger press activates decode processing. Decode processing continues until the bar code decodes, you release the trigger.
- **Presentation (Blink)** - The decoder activates decode processing when it detects a barcode in its field of view. After a period of non-use, the LEDs turn off until the decoder senses motion.
- **Host**-A host command issues the decode signal. The decoder interprets an actual trigger pull as a Level triggering option.
- **Auto Aim** - The decoder projects the aiming pattern when the decoder senses motion. A trigger press activates decode processing. After a period of inactivity the aiming pattern shuts off.
- **Auto Aim with Illumination** - The decoder projects the aiming pattern and internal illumination LEDs when the decoder senses motion. A trigger pull activates decode processing. After 2 seconds of inactivity the aiming pattern and internal illumination LEDs automatically shut off.

Trigger (Level)\*



Presentation (Blink)



**Auto Aim**



**Auto Aim with Illumination**



**Host**



## 2.5 Picklist Mode

---

Scan one of the following barcodes to select a enable or disable Picklist Mode. In this mode, you can pick out and decode a barcode from a group of barcodes that are printed close together by placing the aiming pattern on the barcode you want to decode.

*NOTE: Enabling Picklist Mode overrides the Disable Decode Aiming Pattern options. You can not disable the decode aiming pattern when Picklist Mode is enabled.*

- **Enable Picklist Mode Always** - Picklist Mode is always enabled.
- **Disable Picklist Mode Always** - Picklist Mode is always disabled.

**Enable Picklist Mode Always**



**Disable Picklist Mode Always\***



## 2.6 Continuous Bar Code Read

---

Scan **Enable Continuous Bar Code Read** to report every bar code while the trigger is pressed.

*NOTE: We strongly recommend enabling Picklist Mode. Disabling Picklist Mode can cause accidental decodes when more than one bar code is in the engine's field of view.*

### Enable Continuous Bar Code Read



### Disable Continuous Bar Code Read \*



## 2.7 Unique Bar Code Reporting

---

Scan **Enable Continuous Bar Code Read Uniqueness** to report only unique bar codes while the trigger is pressed. This option only applies when Continuous Bar Code Read is enabled.

### Enable Unique Bar Code Reporting



### Disable Unique Bar Code Reporting \*



## 2.8 Mirrored Image

---

Enable this to scan images in reverse, or mirrored, as if seen through a mirror. This mode is useful in applications requiring scanning through a mirror and using symbologies that do not decode in reverse. Enabling this mode when using snapshot, video, or video viewfinder mode transmits images as mirrored images.

**Disable Mirrored Image\***



**Enable Mirrored Image**



## 2.9 Decode Session Timeout

---

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.5 to 9.9 seconds. The default timeout is 9.9 seconds. To set a Decode Session Timeout, scan the following bar code, and then scan two bar codes from [Appendix B, Numeric Bar Codes](#) that correspond to the desired on time. Enter a leading zero for single digit numbers. For example, to set a Decode Session Timeout of 0.5 seconds, scan this bar code, and then scan the 0 and 5 bar codes. To correct an error or change the selection, [scan Cancel](#).

### Decode Session Timeout



## 2.10 Timeout Between Decodes, Same Symbol

---

Use this option in presentation mode or Continuous Bar Code Read mode to prevent the engine from continuously decoding the same bar code when it is left in the engine's field of view. The bar code must be out of the field of view for the timeout period before the engine reads the same consecutive symbol. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds. The default interval is 0.6 seconds. To select the timeout between decodes for the same symbol, scan the following bar code, and then scan two bar codes from [Appendix B, Numeric Bar Codes](#) that correspond to the desired interval, in 0.1 second increments.

### Timeout Between Decodes, Same Symbol





## 2.11 Timeout Between Decodes, Different Symbols

---

Use this option in presentation mode or Continuous Bar Code Read to control the time the engine waits before decoding a different symbol. It is programmable in 0.1 second increments from 0.1 to 9.9 seconds. The default is 0.1 seconds. To select the timeout between decodes for different symbols, scan the following bar code, and then scan two bar codes from [Appendix B, Numeric Bar Codes](#) that correspond to the desired interval, in 0.1 second increments.

### Timeout Between Decodes, Different Symbols



### 2.11.1 Triggered Timeout, Same Symbol

Scan Enable Triggered Timeout, Same Symbol below to apply Timeout Between Decodes, Same Symbol in hand-held trigger mode. Subsequent scans of Enable Triggered Timeout, Same Symbol are ignored until Timeout Between Decodes, Same Symbol expires.

#### Enable Triggered Timeout, Same Symbol



#### Disable Triggered Timeout, Same Symbol \*



## 2.12 PDF Prioritization

---

Scan Enable PDF Prioritization to delay decoding certain 1D bar codes (see Note below) by the value specified in PDF Prioritization Timeout. During that time the engine attempts to decode a PDF417 symbol (e.g., on a US driver's license), and if successful, reports this only. If it does not decode (can not find) a PDF417 symbol, it reports the 1D symbol after the timeout. The 1D symbol must be in the device's field of view for the engine to report it. This parameter does not affect decoding other symbologies.

Enable PDF Prioritization



Disable PDF Prioritization\*



### 2.12.1 PDF Prioritization Timeout

If you enabled PDF Prioritization, set this timeout to indicate how long the engine attempts to decode a PDF417 symbol before reporting the 1D bar code in the field of view. Scan the following bar code, and then scan four bar codes from [Appendix B, Numeric Bar Codes](#) that specify the timeout in milliseconds. For example, to enter 400 ms, scan the following bar code, and then scan 0400. The range is 0 to 5000 ms, and the default is 200 ms.

PDF Prioritization Timeout



## 2.13 Mobile Phone/Display Mode

---

This mode improves bar code reading performance off mobile phones and electronic displays. Scan one of the following bar codes to select the desired mode.

Disable Mobile Phone/Display Mode\*



Enable Mobile Phone/Display Mode



## 2.14 Transmit “No Read” Message

---

Scan one of the following bar codes to set an option for transmitting the No Read (NR) characters:

- Enable No Read** - This transmits the characters NR when a successful decode does not occur before trigger release or the Decode Session Timeout expires.
- Disable No Read** - This sends nothing to the host if a symbol does not decode.

*NOTE: If you enable Transmit No Read, and also enable Symbol Code ID Character or AIM Code ID Character for Transmit Code ID Character, the engine appends the code ID for Code 39 to the NR message.*

*This does not apply in presentation mode.*

**Enable No Read**



**Disable No Read\***



## 2.15 Prefix/Suffix Values

---

You can append a prefix and/or one or two suffixes to scan data for use in data editing. To set a value for a prefix or suffix, scan one of the following bar codes, and then scan four bar codes from [Appendix B, Numeric Bar Codes](#) that correspond to that value. See [Appendix A, ASCII Character Sets](#) for the four-digit codes. When using host commands to set the prefix or suffix, set the key category parameter to 1, and then set the 3-digit decimal value. See [Appendix A, ASCII Character Sets](#) for the four-digit codes. The default prefix and suffix value is 7013 <CR><LF> (Enter key). To correct an error or change a selection, [scan Cancel](#).

*NOTE: To use Prefix/Suffix values, first set the [Scan Data Transmission Format](#).*

### Scan Prefix



### Scan Suffix 1



### Scan Suffix 2



### Data Format Cancel



## 2.16 Scan Data Transmission Format

---

To change the scan data format, scan one of the following bar codes corresponding to the desired format.

*NOTE : If using this parameter do not use ADF rules to set the prefix/suffix.*

**Data As Is\***



<DATA> <SUFFIX 1>



<DATA> <SUFFIX 2>



<DATA> <SUFFIX 1> <SUFFIX 2>



<PREFIX> <DATA >



<PREFIX> <DATA> <SUFFIX 1>



<PREFIX> <DATA> <SUFFIX 2>



<PREFIX> <DATA> <SUFFIX 1> <SUFFIX 2>



## 2.17 Transmit Code ID Character

---

A Code ID character identifies the code type of a scanned bar code. This is useful when decoding more than one code type. In addition to any single character prefix selected, the Code ID character is inserted between the prefix and the decoded symbol.

Select no Code ID character, a Symbol Code ID character, or an AIM Code ID character. For Code ID characters, see Symbol Code Identifiers and AIM Code Identifiers.

### Symbol Code ID Character



### AIM Code ID Character



### None\*




## 2.18 Miscellaneous Decoder Parameters

---

**Enter Key** - Scan the following barcode to add an Enter key (carriage return/line feed) after scanned data. To program other prefixes and/or suffixes.

**Add Enter Key (Carriage Return/Line Feed)**

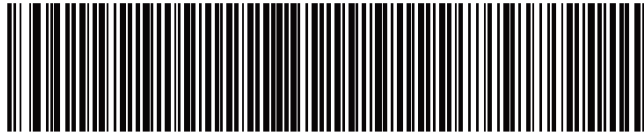

**Tab Key** - Scan the following barcode to add a Tab key after scanned data.

**Tab Key**



## 2.19 Baud Rate

---

Baud rate is the number of bits of data transmitted per second. Scan one of the following barcodes to set the decoder's baud rate to match the baud rate setting of the host device. Otherwise, data may not reach the host device or may reach it in distorted form.

**Baud Rate 9600\***



**Baud Rate 19,200**



**Baud Rate 38,400**



**Baud Rate 57,600**



**Baud Rate 115,200**



**Baud Rate 460,800**



**Baud Rate 921,600**





## 2.20 Parity

---

A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

- Select **Odd** parity to set the parity bit value to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.
- Select **Even** parity to set the parity bit value to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.
- Select **None** when no parity bit is required.

**Odd**



**Even**



**None\***



## 2.20.1 Data Bits

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. Scan one of the following bar codes to set the number of stop bits (one or two) based on the number the receiving host can accommodate.

**1 stop bit\***



**2 stop bits**



## 2.20.2 Data Bits

This parameter allows the engine to interface with devices requiring a 7-bit or 8-bit ASCII protocol.

**8-bit\***



**7-bit**



## 2.20.3 Check Receive Errors

Scan one of the following bar codes to set whether to check the parity, framing, and overrun of received characters.

**Check For Received Errors\***



**Do Not Check For Received Errors**



## 2.21 Hardware Handshaking

---

The data interface consists of a serial port designed to operate either with or without the hardware handshaking lines Request to Send (RTS) and Clear to Send (CTS). If Standard RTS/CTS handshaking is not selected, scan data transmits as it becomes available. Select Standard RTS/CTS handshaking to transmit scan data according to the following sequence:

- The decoder reads the CTS line for activity. If CTS is asserted, the decoder waits up to the Host Serial Response Time-out for the host to de-assert the CTS line. If, after the Host Serial Response Time-out (default) the CTS line is still asserted, the decoder sounds a transmit error and discards any scanned data.
- When the CTS line is de-asserted, the decoder asserts the RTS line and waits up to the Host Serial Response Time-out for the host to assert CTS. When the host asserts CTS, data transmits. If, after the Host Serial Response Time-out (default) the CTS line is not asserted, the decoder sounds a transmit error and discards the data.
- When data transmission completes, the decoder de-asserts RTS 10 msec after sending the last character.
- The host responds by negating CTS. The decoder checks for a de-asserted CTS upon the next transmission of data.

During data transmission, the CTS line should be asserted. If CTS is deasserted for more than 50 ms between characters, the decoder aborts transmission, sounds a transmission error, and discards the data. If the above communication sequence fails, the decoder issues an error indication. In this case, the data is lost and must be rescanned. If hardware handshaking and software handshaking are both enabled, hardware handshaking takes precedence.

NOTE: The DTR signal is jumpered to the active state.

- **None:** Scan this barcode to disable hardware handshaking.
  
- **Standard RTS/CTS:** Scan this barcode to select Standard RTS/CTS Hardware Handshaking.
  
- **RTS/CTS Option 1:** The decoder asserts RTS before transmitting and ignores the state of CTS. The decoder de-asserts RTS when transmission completes.
  
- **RTS/CTS Option 2:** RTS is always high or low (user-programmed logic level). However, the decoder waits for CTS to be asserted before transmitting data. If CTS is not asserted within Host Serial Response Time-out (default), the decoder issues an error indication and discards the data.
  
- **RTS/CTS Option 3:** The decoder asserts RTS prior to any data transmission, regardless of the state of CTS. The decoder waits up to Host Serial Response Time-out (default) for CTS to be asserted. If CTS is not asserted during this time, the decoder issues an error indication and discards the data. The decoder de-asserts RTS when transmission completes.

**None\***



**Standard RTS/CTS**



**RTS/CTS Option 1**



**RTS/CTS Option 2**



**RTS/CTS Option 3**



## 2.21.2 Software Handshaking

This parameter offers control of data transmission in addition to, or instead of, the control hardware handshaking offers. There are five options. If software handshaking and hardware handshaking are both enabled, Hardware Handshaking takes precedence.

- **None** - Data transmits immediately. No response is expected from host.
- **ACK/NAK** -After transmitting data, the decoder expects either an ACK or NAK response from the host. When the decoder receives a NAK, it transmits the same data again and waits for either an ACK or NAK. After three unsuccessful attempts to send data when NAKs are received, the decoder issues an error indication and discards the data.

The decoder waits up to the programmable Host Serial Response Time-out to receive an ACK or NAK. If the decoder does not receive a response in this time, it issues an error indication and discards the data. There are no retries when a time-out occurs.

- **ENQ** - The decoder waits for an ENQ character from the host before transmitting data. If the decoder does not receive an ENQ within the Host Serial Response Time-out, it issues an error indication and discards the data. The host must transmit an ENQ character at least every Host Serial Response Time-out to prevent transmission errors.
- **ACK/NAK with ENQ** - This combines the two previous options. For re-transmissions of data due to a NAK from the host, an additional ENQ is not required.

- **XON/XOFF** - An XOFF character stops data transmission until the engine receives an XON character. There are two situations for XON/XOFF:
  - The decoder receives an XOFF before it has data to send. When the decoder has data to send, it waits up to the Host Serial Response Time-out for an XON character before transmission. If it does not receive an XON within this time, the decoder issues an error indication and discards the data.
  - The decoder receives an XOFF during a transmission. Data transmission then stops after sending the current byte. When the decoder receives an XON character, it sends the rest of the data message. The decoder waits indefinitely for the XON.

None\*



ACK/NAK



ENQ



ACK/NAK with ENQ



XON/XOFF





## 2.22 Set Bar Codes Enable/Disable

---

Scan below bar code to enable / disable bar code setting.

Enable\*



Disable



## 2.23 Parameter barcode scanning

---

Scan one of the following bar codes to select whether to enable or disable the decoding of parameter bar codes, including the Set Defaults bar codes.

Enable Parameter Bar Code  
Scanning\*



Disable Parameter Bar  
Code Scanning



## 2.24 Lock/Unlock Parameter Scanning

---

This feature locks parameter settings with a 4-digit code to prevent the user from changing parameter values by scanning parameter bar codes. This provides an added level of security not offered via Disable Parameter Scanning.

To lock parameter scanning:

1. Scan the Lock bar code.
2. Scan four bar codes from [Appendix B, Numeric Bar Codes](#) that represent the desired code. Enter leading zeros for numbers below 1000, e.g., to program a code of 29, enter 0, 0, 2, 9. A "lock" beep sounds (two long high beeps) in addition to the parameter entry beep.

To unlock parameter scanning:

1. Scan the Unlock bar code.
2. Scan four bar codes from [Appendix B, Numeric Bar Codes](#) that represent the correct code. An "unlock" beep sounds (two long low beeps) in addition to the parameter entry beep.

Entering an incorrect code results in a parameter error beep.

Lock



Unlock



## 2.25 Validate Concatenated Parameter Bar Codes

---

The engine can encounter invalid parameters when using concatenated parameter bar codes intended for different scanner models or different versions of a scanner. This parameter determines how to process concatenated parameter bar codes when the engine encounters an invalid parameter setting in the bar code. Disable this to ignore invalid parameters and configure valid parameters. Enable this to ignore all parameters if one or more are invalid.

Disable Validate Concatenated  
Parameter Bar Codes\*



Enable Validate Concatenated  
Parameter Bar Codes



## 2.26 Intercharacter Delay

---

This parameter specifies the intercharacter delay inserted between character transmissions.

Minimum: 0 msec \*



Low: 25 msec



Medium: 50 msec



High: 75 msec



Maximum: 99 msec



## Chapter 3 – Symbology

### 3.1 UPC/EAN/JAN

---

#### 3.1.1 UPC-A

Scan one of the following bar codes to enable or disable UPC-A.

Enable UPC-A\*



 
Disable UPC-A




#### 3.1.2 UPC-E

Scan one of the following bar codes to enable or disable UPC-E.

Enable UPC-E\*



Disable UPC-E

 

### 3.1.3 UPC-E1

Scan one of the following bar codes to enable or disable UPC-E1.

*Note : UPC-E1 is not a UCC (Uniform Code Council) approved symbology.*

**Enable UPC-E1**



**Disable UPC-E1\***



### 3.1.4 EAN-8/JAN-8

Scan one of the following bar codes to enable or disable EAN-8/JAN-8.

**Enable EAN-8/JAN-8\***



**Disable EAN-8/JAN-8**



#### 3.1.4.1 Transmit EAN-8 Check Digit

The check digit is the last character of the symbol used to verify the integrity of the data. Scan one of the following barcodes to transmit the barcode data with or without the EAN-8 check digit. It is always verified to guarantee the integrity of the data.

**Transmit EAN-8 Check Digit\***



**Do Not Transmit EAN-8 Check Digit**



### 3.1.5 EAN-13/JAN-13

Scan one of the following bar codes to enable or disable EAN-13/JAN-13.

**Enable EAN-13/JAN-13\***



**Disable EAN-13/JAN-13**



#### 3.1.5.1 Transmit EAN-13 Check Digit

The check digit is the last character of the symbol used to verify the integrity of the data. Scan one of the following barcodes to transmit the barcode data with or without the EAN-13 check digit. It is always verified to guarantee the integrity of the data.

**Transmit EAN-13 Check Digit \***



**Do Not Transmit EAN-13 Check Digit**





### 3.1.6 Bookland EAN

Scan one of the following bar codes to enable or disable Bookland EAN.

**Enable Bookland EAN**



**Disable Bookland EAN\***



### 3.1.7 Bookland ISBN Format

If you enabled Bookland EAN, select one of the following formats for Bookland data:

- **Bookland ISBN-10** - The engine reports Bookland data starting with 978 in traditional 10-digit format with the special Bookland check digit for backward-compatibility. Data starting with 979 is not considered Bookland in this mode.
- **Bookland ISBN-13** - The engine reports Bookland data (starting with either 978 or 979) as EAN-13 in 13-digit format to meet the 2007 ISBN-13 protocol.

**Bookland ISBN-10\***



**Bookland ISBN-13**



### 3.1.8 ISSN EAN

Scan one of the following bar codes to enable or disable ISSN EAN.

**Enable ISSN EAN**



**Disable ISSN EAN \***



### 3.1.9 Decode UPC/EAN/JAN Supplementals

**Decode UPC/EAN/JAN With Supplementals Only**



**Ignore UPC/EAN/JAN Supplementals \***



**Autodiscriminate UPC/EAN/JAN with Supplementals**



**Enable 378/379 Supplemental Mode**



**Enable 978/979 Supplemental Mode**



**Enable 977 Supplemental Mode**



**Enable 414/419/434/439 Supplemental Mode**



**Enable Smart Supplemental Mode**



**Supplemental User-Programmable Type 1 and 2**



**Smart Supplemental Plus User-Programmable 1 and 2**



**Smart Supplemental Plus User-Programmable 1**



**Supplemental User-Programmable Type 1**



**Enable 491 Supplemental Mode**



### 3.1.10 User-Programmable Supplementals

If you selected a Supplemental User-Programmable option, scan User-Programmable Supplemental 1, and then scan three bar codes from [Appendix B, Numeric Bar Codes](#) to set the 3-digit prefix.

To set a second 3-digit prefix, scan User-Programmable Supplemental 2, and then scan three bar codes from [Appendix B, Numeric Bar Codes](#). The default is 000 (zeroes).

#### User-Programmable Supplemental 1



#### User-Programmable Supplemental 2



### 3.1.11 UPC/EAN/JAN Supplemental

#### Redundancy

If you selected Autodiscriminate UPC/EAN/JAN with Supplementals, this option sets the number of times to decode a symbol without supplementals before transmission. The range is from 2 to 16. Five or above is recommended when decoding a mix of UPC/EAN/JAN symbols with and without supplementals. The default is 10. To set a redundancy value, scan the following bar code, and then scan two bar codes from [Appendix B, Numeric Bar Codes](#). Enter a leading zero for single digit numbers. To correct an error or change a selection, [scan Cancel](#).

#### UPC/EAN/JAN Supplemental Redundancy



### 3.1.12 UPC/EAN/JAN Supplemental AIM ID

#### Format

If Transmit Code ID Character is set to AIM Code ID Character, scan one of the following bar codes to select an output format when reporting UPC/EAN/JAN bar codes with supplementals:

- **Separate** - Transmit UPC/EAN/JAN with supplementals with separate AIM IDs but one transmission, i.e., ]E<0 or 4><data>]E<1 or 2>[supplemental data]
- **Combined** – Transmit UPC/EAN/JAN with supplementals with one AIM ID and one transmission, i.e., ]E3<data+supplemental data>
- **Separate Transmissions** - Transmit UPC/EAN/JAN with supplementals with separate AIM IDs and separate transmissions, i.e.,  
]E<0 or 4><data>  
]E<1 or 2>[supplemental data]

#### Separate



#### Combined\*



#### Separate Transmissions



 
### 3.1.13 Transmit UPC-A Check Digit

The check digit is the last character of the symbol used to verify the integrity of the data. Scan one of the following bar codes to transmit the bar code data with or without the UPC-A check digit. It is always verified to guarantee the integrity of the data.

**Transmit UPC-A Check Digit \***




**Do Not Transmit UPC-A Check Digit**



### 3.1.14 Transmit UPC-E Check Digit

The check digit is the last character of the symbol used to verify the integrity of the data. Scan one of the following bar codes to transmit the bar code data with or without the UPC-E check digit. It is always verified to guarantee the integrity of the data.

 **Transmit UPC-E Check Digit \***



**Do Not Transmit UPC-E Check Digit**



### 3.1.15 Transmit UPC-E1 Check Digit

The check digit is the last character of the symbol used to verify the integrity of the data. Scan one of the following bar codes to transmit the bar code data with or without the UPC-E1 check digit. It is always verified to guarantee the integrity of the data.

**Transmit UPC-E1 Check Digit \***



**Do Not Transmit UPC-E1 Check Digit**

 


### 3.1.16 UPC-A Preamble

Preamble characters are part of the UPC symbol, and include Country Code and System Character. Select the appropriate option for transmitting a UPC-A preamble to match the host system:

- Transmit System Character only
- Transmit System Character and Country Code ("0" for USA)
- Transmit no preamble.

**No Preamble (<DATA>)**



**System Character (<SYSTEM CHARACTER> <DATA>)\***



**System Character & Country Code(< COUNTRY CODE>  
<SYSTEM CHARACTER> <DATA>)**





### 3.1.17 UPC-E Preamble

 
Preamble characters are part of the UPC symbol, and include Country Code and System Character. Select the appropriate option for transmitting a UPC-E preamble to match the host system:

- Transmit System Character only
- Transmit System Character and Country Code ("0" for USA)
- Transmit no preamble.

No Preamble (<DATA>)



System Character (<SYSTEM CHARACTER> <DATA>)\*



System Character & Country Code(< COUNTRY CODE>  
<SYSTEM CHARACTER> <DATA>)



### 3.1.18 UPC-E1 Preamble

Preamble characters are part of the UPC symbol, and include Country Code and System Character. Select the appropriate option for transmitting a UPC-E1 preamble to match the host system:

- Transmit System Character only
- Transmit System Character and Country Code ("0" for USA)
- Transmit no preamble.

No Preamble (<DATA>)



System Character (<SYSTEM CHARACTER> <DATA>)\*



System Character & Country Code(< COUNTRY CODE>  
<SYSTEM CHARACTER> <DATA>)



### 3.1.19 Convert UPC-E to UPC-A

Enable this to convert UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Disable this to transmit UPC-E decoded data as UPC-E data, without conversion.

**Convert UPC-E to UPC-A (Enable)**



**Do Not Convert UPC-E to UPC-A (Disable)\***



### 3.1.20 Convert UPC-E1 to UPC-A

Scan **Convert UPC-E1 to UPC-A (Enable)** to convert UPC-E1 decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit). Scan **Do Not Convert UPC-E1 to UPC-A (Disable)** to transmit UPC-E1 decoded data as UPC-E1 data, without conversion.

**Convert UPC-E1 to UPC-A (Enable)**



**Do Not Convert UPC-E1 to UPC-A (Disable)\***



### 3.1.21 EAN/JAN Zero Extend

Scan **Enable EAN/JAN Zero Extend** to add five leading zeros to decoded EAN-8 symbols to make them compatible in length to EAN-13 symbols.

Scan **Disable EAN/JAN Zero Extend** to transmit EAN-8 symbols as is.

**Enable EAN/JAN Zero Extend**



**Disable EAN/JAN Zero Extend\***



### 3.1.22 UCC Coupon Extended Code

Scan **Enable UCC Coupon Extended Code** to decode UPC-A bar codes starting with digit '5', EAN-13 bar codes starting with digit '99', and UPC-A/GS1-128 coupon codes. UPC-A, EAN-13, and GS1-128 must be enabled to use this feature.

**Enable UCC Coupon Extended Code**



**Disable UCC Coupon Extended Code\***



### 3.1.23 Coupon Report

Scan one of the following bar codes to select the type of coupon format to support.

- **Old Coupon Format** - Support UPC-A/GS1-128 and EAN-13/GS1-128.
- **New Coupon Format** - An interim format to support UPC-A/GS1-DataBar and EAN-13/GS1-DataBar.
- **Autodiscriminate Format** - Support both Old Coupon Format and New Coupon Format.

#### Old Coupon Format



#### New Coupon Format\*



#### Auto discriminate Coupon Format



### 3.1.24 UPC Reduced Quiet Zone

Scan one of the following bar codes to enable or disable decoding UPC bar codes with reduced quiet zones (the margins on either side of the bar code). If you select **Enable**, select a [1D Quiet Zone Level](#).

**Enable UPC Reduced Quiet Zone**



 
**Disable UPC Reduced Quiet Zone\***



### 3.1.25 Code 128

Scan one of the following bar codes to enable or disable Code 128.

**Enable Code 128\***



**Disable Code 128**



### 3.1.25.1 Set Lengths for Code 128

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 128 to any length, one or two discrete lengths, or lengths within a specific range. The default is **Any Length**.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only Code 128 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 128 symbols with 14 characters, scan Code 128 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only Code 128 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 128 symbols containing either 2 or 14 characters, scan Code 128 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Length Within Range** - Decode Code 128 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode Code 128 symbols containing between 4 and 12 characters, scan Code 128 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode Code 128 symbols containing any number of characters within the engine's capability.

### 3.1.26 Set Lengths for Code 128

Code 128 - One Discrete Length



Code 128 - Two Discrete Lengths



Code 128 - Length Within Range



Code 128 - Any Length\*





### 3.1.27 GS1-128 (formerly UCC/EAN-128)

Scan one of the following bar codes to enable or disable GS1-128.

Enable GS1-128\*



Disable GS1-128



### 3.1.28 ISBT 128

ISBT 128 is a variant of Code 128 used in the blood bank industry. Scan one of the following bar codes to enable or disable ISBT 128.

Enable ISBT 128\*



Disable ISBT 128



### 3.1.29 ISBT Concatenation

Select an option for concatenating pairs of ISBT code types:

- **Enable ISBT Concatenation –**

There must be two ISBT codes in order for the engine to decode and perform concatenation. The engine does not decode single ISBT symbols.

- **Disable ISBT Concatenation –**

The engine does not concatenate pairs of ISBT codes it encounters.

- **Autodiscriminate ISBT Concatenation –**

The engine decodes and concatenates pairs of ISBT codes immediately. If only a single ISBT symbol is present, the engine must decode the symbol the number of times set via ISBT Concatenation Redundancy before transmitting its data to confirm that there is no additional ISBT symbol.

**Enable ISBT Concatenation**



**Disable ISBT Concatenation\***



**Autodiscriminate ISBT Concatenation**



### 3.1.30 Check ISBT Table

The ISBT specification includes a table that lists several types of ISBT bar codes that are commonly used in pairs. If you set **ISBT Concatenation to Enable**, enable **Check ISBT Table** to concatenate only those pairs found in this table. Other types of ISBT codes are not concatenated.

Enable Check ISBT Table\*



Disable Check ISBT Table



### 3.1.31 ISBT Concatenation Redundancy

If you set ISBT Concatenation to Autodiscriminate (the default), use this parameter to set the number of times the engine must decode an ISBT symbol before determining that there is no additional symbol. Scan the following bar code, and then scan bar codes in [Appendix B, Numeric Bar Codes](#) to set a value between 2 and 20. Enter a leading zero for single digit numbers. To correct an error or change a selection, [scan Cancel](#). The default is 10.

ISBT Concatenation Redundancy



### 3.1.32 Code 128 <FNC4>

This feature applies to Code 128 bar codes with an embedded <FNC4> character. Select **Ignore Code 128 <FNC4>** to strip the <FNC4> character from the decode data. The remaining characters are sent to the host unchanged. When disabled, the <FNC4> character is processed normally as per Code 128 standard.

**Honor Code 128 <FNC4>\***



**Ignore Code 128 <FNC4>**



### 3.1.33 Code 128 Security Level

Code 128 bar codes are vulnerable to misdecodes, particularly when Code 128 Lengths is set to **Any Length**. The engine offers four levels of decode security for Code 128 bar codes. There is an inverse relationship between security and engine aggressiveness. Increasing the level of security can reduce scanning aggressiveness, so select only the level of security necessary.

- **Code 128 Security Level 0** - The engine operates in its most aggressive state, while providing sufficient security in decoding most in-spec bar codes.
- **Code 128 Security Level 1** - This option eliminates most misdecodes while maintaining reasonable aggressiveness.
- **Code 128 Security Level 2** - This option applies greater bar code security requirements if Security Level 1 fails to eliminate misdecodes.
- **Code 128 Security Level 3** - If you selected Security Level 2, and misdecodes still occur, select this security level to apply the highest safety requirements.

*NOTE: Selecting this option is an extreme measure against mis-decoding severely out-of-spec bar codes, and significantly impairs the decoding ability of the engine. If this level of security is required, try to improve the quality of the bar codes.*

### 3.1.34 Code 128 Security Level (continued)

Code 128 Security Level 0



Code 128 Security Level 1\*



Code 128 Security Level 2



Code 128 Security Level 3



### 3.1.35 Code 128 Reduced Quiet Zone

Scan one of the following bar codes to enable or disable decoding Code 128 bar codes with reduced quiet zones (the margins on either side of the bar code). If you select Enable, select a [1D Quiet Zone Level](#).

#### Enable Code 128 Reduced Quiet Zone



#### Disable Code 128 Reduced Quiet Zone\*



## 3.2 Code 39

---

### 3.2.1 Code 128 Reduced Quiet Zone

Scan one of the following bar codes to enable or disable Code 39.

Enable Code 39\*



Disable Code 39



### 3.2.2 Trioptic Code 39

Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. Trioptic Code 39 symbols always contain six characters.

Scan one of the following bar codes to enable or disable Trioptic Code 39.

*NOTE: You cannot enable Trioptic Code 39 and Code 39 Full ASCII simultaneously.*

Enable Trioptic Code 39



Disable Trioptic Code 39\*





### 3.2.3 Convert Code 39 to Code 32

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan one of the following bar codes to enable or disable converting Code 39 to Code 32.

*NOTE: Code 39 must be enabled for this parameter to function.*

#### Enable Convert Code 39 to Code 32



#### Disable Convert Code 39 to Code 32\*



### 3.2.4 Code 32 Prefix

Scan one of the following bar codes to enable or disable adding the prefix character "A" to all Code 32 bar codes.

*NOTE: Convert Code 39 to Code 32 must be enabled for this parameter to function.*

#### Enable Code 32 Prefix



#### Disable Code 32 Prefix\*



### 3.2.5 Set Lengths for Code 39

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 39 to any length, one or two discrete lengths, or lengths within a specific range. If Code 39 Full ASCII is enabled, Length Within Range or Any Length are the preferred options. The default is Length Within Range: 2 to 55.

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only Code 39 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 39 symbols with 14 characters, scan Code 39 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only Code 39 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 39 symbols containing either 2 or 14 characters, scan Code 39 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Length Within Range** - Decode Code 39 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode Code 39 symbols containing between 4 and 12 characters, scan Code 39 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode Code 39 symbols containing any number of characters within the engine's capability.

*Note : When setting lengths, enter a leading zero for single digit numbers.*

### 3.2.6 Set Lengths for Code 39

Code 39 - One Discrete Length



Code 39 - Two Discrete Lengths



Code 39 - Length Within Range \*



Code 39 - Any Length



### 3.2.7 Code 39 Check Digit Verification

Scan Enable Code 39 Check Digit to check the integrity of all Code 39 symbols to verify that the data complies with specified check digit algorithm. Only Code 39 symbols which include a modulo 43 check digit are decoded. Enable this feature if the Code 39 symbols contain a Modulo 43 check digit.

Enable Code 39 Check Digit



Disable Code 39 Check Digit \*



### 3.2.8 Transmit Code 39 Check Digit

Scan one of the following bar codes to transmit Code 39 data with or without the check digit.

*NOTE: Code 39 Check Digit Verification must be enabled for this parameter to function.*

#### Transmit Code 39 Check Digit (Enable)



#### Do Not Transmit Code 39 Check Digit (Disable) \*



### 3.2.9 Code 39 Full ASCII Conversion

Code 39 Full ASCII is a variant of Code 39 which pairs characters to encode the full ASCII character set. Scan one of the following bar codes to enable or disable Code 39 Full ASCII.

*NOTE: You cannot enable Trioptic Code 39 and Code 39 Full ASCII simultaneously.*

#### Enable Code 39 Full ASCII



#### Disable Code 39 Full ASCII \*



### 3.2.10 Code 39 Security Level

The engine offers four levels of decode security for Code 39 bar codes. There is an inverse relationship between security and engine aggressiveness. Increasing the level of security can reduce scanning aggressiveness, so select only the level of security necessary.

- **Code 39 Security Level 0:** The engine operates in its most aggressive state, while providing sufficient security in decoding most in-spec bar codes.
- **Code 39 Security Level 1:** This default setting eliminates most misdecodes.
- **Code 39 Security Level 2:** This option applies greater bar code security requirements if Security Level 1 fails to eliminate misdecodes.
- **Code 39 Level 3:** If you selected Security Level 2, and misdecodes still occur, select this security level to apply the highest safety requirements.

*NOTE Selecting this option is an extreme measure against mis-decoding severely out-of-spec bar codes, and significantly impairs the decoding ability of the engine. If this level of security is required, try to improve the quality of the bar codes.*

### 3.2.11 Code 39 Security Level

Code 39 Security Level 0



Code 39 Security Level 1\*



Code 39 Security Level 2



Code 39 Security Level 3



### 3.2.12 Code 39 Reduced Quiet Zone

Scan one of the following bar codes to enable or disable decoding Code 39 bar codes with reduced quiet zones (the margins on either side of the bar code). If you select Enable, select a [1D Quiet Zone Level](#).

Enable Code 39 Reduced Quiet Zone



Disable Code 39 Reduced Quiet Zone\*

 


## 3.3 Code 93

---

Scan one of the following bar codes to enable or disable Code 93.

Enable Code 93\*



Disable Code 93



### 3.3.1 Set Lengths for Code 128

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 93 to any length, one or two discrete lengths, or lengths within a specific range. The default is Length Within Range: 4 to 55.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only Code 93 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 93 symbols with 14 characters, scan Code 93 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only Code 93 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 93 symbols containing either 2 or 14 characters, scan Code 93 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Length Within Range** - Decode Code 93 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode Code 93 symbols containing between 4 and 12 characters, scan Code 93 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode Code 93 symbols containing any number of characters within the engine's capability.



**Code 93 - One Discrete Length**



**Code 93 - Two Discrete Lengths**



**Code 93 - Length Within Range\***



**Code 93 - Any Length**

 


## 3.4 Code 11


---

Scan one of the following bar codes to enable or disable Code 93.

**Enable Code 11**



**Disable Code 11\***

 

### 3.4.1 Set Lengths for Code 11

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Code 11 to any length, one or two discrete lengths, or lengths within a specific range. The default is Length Within Range: 4 to 55.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only Code 11 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 11 symbols with 14 characters, scan Code 11 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only Code 11 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Code 11 symbols containing either 2 or 14 characters, scan Code 11 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Length Within Range** - Decode Code 11 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode Code 11 symbols containing between 4 and 12 characters, scan Code 11 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode Code 11 symbols containing any number of characters within the engine's capability.

**Code 11 - One Discrete Length**



**Code 11 - Two Discrete Lengths**



**Code 11 - Length Within Range\***



**Code 11 - Any Length**



### 3.4.2 Code 11 Check Digit Verification

This feature allows the engine to check the integrity of all Code 11 symbols to verify that the data complies with the specified check digit algorithm.

Scan one of the following bar codes to specify the number of check digits encoded in the Code 11 symbols, or to disable this feature.

**Disable\***



**One Check Digit**



**Two Check Digits**



 
### 3.4.3 Transmit Code 11 Check Digits

Scan one of the following bar codes to select whether or not to transmit the Code 11 check digit(s).

**Do Not Transmit Code 11 Check Digit(s) (Disable)\***



**Transmit Code 11 Check Digit(s) (Enable)**



## 3.5 Interleaved 2 of 5 (ITF)

 
---

Scan one of the following bar codes to enable or disable Interleaved 2 of 5.

Enable Interleaved 2 of 5 \*



Disable Interleaved 2 of 5



### 3.5.1 Set Lengths for Interleaved 2 of 5

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for I 2 of 5 to any length, one or two discrete lengths, or lengths within a specific range. The default is One Discrete Length: 14.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only I 2 of 5 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only I 2 of 5 symbols with 14 characters, scan I 2 of 5 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only I 2 of 5 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only I 2 of 5 symbols containing either 2 or 14 characters, scan I 2 of 5 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Length Within Range** - Decode I 2 of 5 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode I 2 of 5 symbols containing between 4 and 12 characters, scan I 2 of 5 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode I 2 of 5 symbols containing any number of characters within the engine's capability



*Note: Due to the construction of the I 2 of 5 symbology, it is possible for a scan line covering only a portion of the code to transmit as a complete scan, yielding less data than is encoded in the bar code. To prevent this, select specific lengths (I 2 of 5 - One Discrete Length, Two Discrete Lengths) for I 2 of 5 applications, or increase the I 2 of 5 Security Level.*

**I 2 of 5 - One Discrete Length\***



**I 2 of 5 - Length Within Range**



**I 2 of 5 - Two Discrete Lengths**



**I 2 of 5 - Any Length**



### 3.5.2 I 2 of 5 Check Digit Verification

Scan one of the following bar codes to check the integrity of all I 2 of 5 symbols to verify the data complies with either the specified Uniform Symbology Specification (USS), or the Optical Product Code Council (OPCC) check digit algorithm.

**Disable\***



**USS Check Digit**



**OPCC Check Digit**



### 3.5.3 Transmit I 2 of 5 Check Digit

Scan one of the following bar codes to transmit I 2 of 5 data with or without the check digit.

**Transmit I 2 of 5 Check Digit (Enable)**



 
**Do Not Transmit I 2 of 5 Check Digit (Disable)\***



### 3.5.4 Convert I 2 of 5 to EAN-13

Scan Convert I 2 of 5 to EAN-13 (Enable) to convert 14-character I 2 of 5 codes to EAN-13, and transmit to the host as EAN-13. To accomplish this, the I 2 of 5 code must be enabled, and the code must have a leading zero and a valid EAN-13 check digit.

**Convert I 2 of 5 to EAN-13 (Enable)**



**Do Not Convert I 2 of 5 to EAN-13 (Disable)\***



### 3.5.5 Febraban

Febraban is an I 2 of 5 barcode of length 44 that requires special check characters to be inserted in the transmitted data stream. When enabled, the I 2 of 5 internal check digit calculation and transmission is disabled. When disabled, all I 2 of 5 functionality works as usual.

#### Recommendations for Length Setting

I 2 of 5 Length 1: Larger of the fixed length and the FEBRABAN length (==44).

I 2 of 5 Length 2: Smaller of the fixed length and the FEBRABAN length (==44).

**Enable Febraban**



**Disable Febraban\***



### 3.5.6 I 2 of 5 Security Level

Interleaved 2 of 5 bar codes are vulnerable to misdecodes, particularly when I 2 of 5 Lengths is set to Any Length. The engine offers four levels of decode security for Interleaved 2 of 5 bar codes. There is an inverse relationship between security and engine aggressiveness. Increasing the level of security can reduce scanning aggressiveness, so select only the level of security necessary.

- **I 2 of 5 Security Level 0:** The engine operates in its most aggressive state, while providing sufficient security in decoding most in-spec bar codes.
- **I 2 of 5 Security Level 1:** A bar code must be successfully read twice, and satisfy certain safety requirements before being decoded. This default setting eliminates most misdecodes.
- **I 2 of 5 Security Level 2:** This option applies greater bar code security requirements if Security Level 1 fails to eliminate misdecodes.
- **I 2 of 5 Security Level 3:** If you selected Security Level 2, and misdecodes still occur, select this security level. The highest safety requirements are applied. A bar code must be successfully read three times before being decoded.

*Note: Selecting this option is an extreme measure against mis-decoding severely out-of-spec bar codes, and significantly impairs the decoding ability of the engine. If this level of security is required, try to improve the quality of the bar codes.*

I 2 of 5 Security Level 0



I 2 of 5 Security Level 1\*



I 2 of 5 Security Level 2



I 2 of 5 Security Level 3



### 3.5.7 I 2 of 5 Reduced Quiet Zone

Scan one of the following bar codes to enable or disable decoding I 2 of 5 bar codes with reduced quiet zones (the margins on either side of the bar code). If you select Enable, select a [1D Quiet Zone Level](#).

#### Enable I 2 of 5 Reduced Quiet Zone



#### Disable I 2 of 5 Reduced Quiet Zone\*



## 3.6 Discrete 2 of 5 (DTF)

---

Scan one of the following bar codes to enable or disable Discrete 2 of 5.

Enable Discrete 2 of 5



Disable Discrete 2 of 5\*



### 3.6.1 Set Lengths for Discrete 2 of 5

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for D 2 of 5 to any length, one or two discrete lengths, or lengths within a specific range. The default is One Discrete Length: 12.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only D 2 of 5 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only D 2 of 5 symbols with 14 characters, scan D 2 of 5 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only D 2 of 5 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only D 2 of 5 symbols containing either 2 or 14 characters, scan D 2 of 5 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).

- **Length Within Range** - Decode D 2 of 5 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode D 2 of 5 symbols containing between 4 and 12 characters, scan D 2 of 5 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode D 2 of 5 symbols containing any number of characters within the engine's capability.

*Note: Due to the construction of the D 2 of 5 symbology, it is possible for a scan line covering only a portion of the code to transmit as a complete scan, yielding less data than is encoded in the bar code. To prevent this, select specific lengths (D 2 of 5 - One Discrete Length, Two Discrete Lengths) for D 2 of 5 applications.*

**D 2 of 5 - One Discrete Length\***



**D 2 of 5 - Two Discrete Lengths**



**D 2 of 5 - Length Within Range**



**D 2 of 5 - Any Length**





## 3.7 Codabar (NW - 7)

---

Scan one of the following bar codes to enable or disable Codabar.

Enable Codabar\*



Disable Codabar



### 3.7.1 Set Lengths for Codabar

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Codabar to any length, one or two discrete lengths, or lengths within a specific range. The default is Length Within Range: 5 to 55.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only Codabar symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Codabar symbols with 14 characters, scan Codabar - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only Codabar symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Codabar symbols containing either 2 or 14 characters, scan Codabar - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the

selection, [scan Cancel](#).

- **Length Within Range** - Decode Codabar symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode Codabar symbols containing between 4 and 12 characters, scan Codabar - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode Codabar symbols containing any number of characters within the engine's capability.

**Codabar - One Discrete Length**



**Codabar - Two Discrete Lengths**



**Codabar - Length Within Range\***



**Codabar - Any Length**

 


### 3.7.2 CLSI Editing

Scan **Enable CLSI Editing** to strip the start and stop characters and insert a space after the first, fifth, and tenth characters of a 14-character Codabar symbol if the host system requires this data format.

*NOTE: Symbol length does not include start and stop characters.*

#### Enable CLSI Editing



#### Disable CLSI Editing\*



### 3.7.3 NOTIS Editing

Scan **Enable NOTIS Editing** to strip the start and stop characters from a decoded Codabar symbol if the host system requires this data format.

#### Enable NOTIS Editing



#### Disable NOTIS Editing\*



 
## 3.7.4 Codabar Upper or Lower Case Start/Stop Characters

Scan one of the following bar codes to select whether to transmit upper case or lower case Codabar start/stop characters.

Lower Case



Upper Case\*



### 3.7.4.1 Codabar Mod 16 Check Digit Verification

Enable this feature to check the Codabar Mod 16 Check Digit to verify that the data complies with the specified check digit algorithm.

Enable Codabar Mod 16 Check Digit



Disable Codabar Mod 16 Check Digit \*



### 3.7.4.2 Transmit Codabar Check Digit

Scan one of the following barcodes to select whether or not to transmit the Codabar check digit(s).

**Enable Codabar Check Digit Transmission**



**Disable Codabar Check Digit Transmission \***



## 3.8 MSI

---

Scan one of the following bar codes to enable or disable MSI.

Enable MSI



Disable MSI \*



### 3.8.1 Set Lengths for MSI

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for MSI to any length, one or two discrete lengths, or lengths within a specific range. The default is Length Within Range: 4 to 55.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only MSI symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only MSI symbols with 14 characters, scan MSI - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only MSI symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only MSI symbols containing either 2 or 14 characters, scan MSI - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).

- **Length Within Range** - Decode MSI symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode MSI symbols containing between 4 and 12 characters, scan MSI - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode MSI symbols containing any number of characters within the engine's capability.

*Note: Due to the construction of the MSI symbology, it is possible for a scan line covering only a portion of the code to transmit as a complete scan, yielding less data than is encoded in the bar code. To prevent this, select specific lengths (MSI - One Discrete Length, Two Discrete Lengths) for MSI applications.*

**MSI - One Discrete Length**



**MSI - Two Discrete Lengths**



**MSI - Length Within Range\***



 
**MSI - Any Length**




### 3.8.2 MSI Check Digits

With MSI symbols, one check digit is mandatory and always verified by the reader. The second check digit is optional. If the MSI codes include two check digits, scan the Two MSI Check Digits bar code to enable verification of the second check digit. See [MSI Check Digit Algorithm](#) to select second digit algorithms.

**One MSI Check Digit \***



**Two MSI Check Digits**

 

**No MSI Check Digit**

 




### 3.8.3 Transmit MSI Check Digit(s)

Scan one of the following bar codes to transmit MSI data with or without the check digit.

**Transmit MSI Check Digit(s) (Enable)**




**Do Not Transmit MSI Check Digit(s) (Disable)\***



### 3.8.4 Transmit MSI Check Digit(s)

Scan one of the following bar codes to transmit MSI data with or without the check digit.

 **Transmit MSI Check Digit(s) (Enable)**




**Do Not Transmit MSI Check Digit(s) (Disable)\***




### 3.8.5 MSI Check Digit Algorithm

Two algorithms are available for verifying the second MSI check digit. Scan one of the following bar codes to select the algorithm used to encode the check digit.

 **MOD 11/MOD 10**



**MOD 10/MOD 10\***

 

### 3.8.6 MSI Reduced Quiet Zone

Scan one of the following bar codes to enable or disable decoding MSI bar codes with reduced quiet zones. If you select Enable, select a [1D Quiet Zone Level](#).

**Disable MSI Reduced Quiet Zone\***



**Enable MSI Reduced Quiet Zone**

 


## 3.9 Chinese 2 of 5

---

Scan one of the following bar codes to enable or disable Chinese 2 of 5.

Enable Chinese 2 of 5



Disable Chinese 2 of 5\*



## 3.10 Matrix 2 of 5

---

Scan one of the following bar codes to enable or disable Matrix 2 of 5.

Enable Matrix 2 of 5



Disable Matrix 2 of 5\*



### 3.10.1 Set Lengths for Matrix 2 of 5

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Set lengths for Matrix 2 of 5 to any length, one or two discrete lengths, or lengths within a specific range. The default is One Discrete Length: 14.

*Note: When setting lengths, enter a leading zero for single digit numbers.*

Scan one of the following bar codes to select a length option:

- **One Discrete Length** - Decode only Matrix 2 of 5 symbols containing a selected length. Select the length using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Matrix 2 of 5 symbols with 14 characters, scan Matrix 2 of 5 - One Discrete Length, and then scan 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Two Discrete Lengths** - Decode only Matrix 2 of 5 symbols containing either of two lengths. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode only Matrix 2 of 5 symbols containing either 2 or 14 characters, scan Matrix 2 of 5 - Two Discrete Lengths, and then scan 0, 2, 1, 4. To correct an error or change the selection, [scan Cancel](#).
- **Length Within Range** - Decode Matrix 2 of 5 symbols with a specific length range. Select lengths using the bar codes in [Appendix B, Numeric Bar Codes](#). For example, to decode Matrix 2 of 5 symbols containing between 4 and 12 characters, scan Matrix 2 of 5 - Length Within Range, and then scan 0, 4, 1, 2. To correct an error or change the selection, [scan Cancel](#).
- **Any Length** - Decode Matrix 2 of 5 symbols containing any number of characters within the engine's capability.

**Matrix 2 of 5 - One Discrete Length****Matrix 2 of 5 - Two Discrete Lengths****Matrix 2 of 5 - Length Within Range \*****Matrix 2 of 5 - Any Length**

### 3.10.2 Matrix 2 of 5 Check Digit

The check digit is the last character of the symbol used to verify the integrity of the data. Scan one of the following bar codes to determine whether to include the Matrix 2 of 5 check digit with the bar code data.

**Enable Matrix 2 of 5 Check Digit****Disable Matrix 2 of 5 Check Digit\***

### 3.10.3 Transmit Matrix 2 of 5 Check Digit

Scan one of the following bar codes to transmit Matrix 2 of 5 data with or without the check digit.

**Transmit Matrix 2 of 5 Check Digit**



**Do Not Transmit Matrix 2 of 5 Check Digit\***



## 3.11 Inverse 1D

---

Scan one of the following bar codes to set the 1D inverse decoder setting:

- Regular Only** - The engine decodes regular 1D bar codes only
- Inverse Only** - The engine decodes inverse 1D bar codes only
- Inverse Autodetect** - The engine decodes both regular and inverse 1D barcodes.

*Note: This parameter does not apply to GS1 DataBar code types*

*The Inverse 1D setting may impact Composite or Inverse Composite decoding. See Composite Inverse.*

**Regular\***



**Inverse Only**



**Inverse Autodetect**



 


## 3.12 GS1 DataBar


---

The variants of GS1 DataBar are DataBar-14, DataBar Expanded, and DataBar Limited. The limited and expanded versions have stacked variants. Scan the appropriate bar codes to enable or disable each variant of GS1 DataBar.

**Enable GS1 DataBar Omnidirectional \***



**Disable GS1 DataBar Omnidirectional**

 

### 3.12.1 GS1 DataBar Limited

**Enable GS1 DataBar Limited\***



**Disable GS1 DataBar Limited**



### 3.12.2 GS1 DataBar Expanded

**Enable GS1 DataBar Expanded\***



**Disable GS1 DataBar Expanded**



### 3.12.3 Convert GS1 DataBar to UPC/EAN/JAN

This parameter only applies to GS1 DataBar-14 and GS1 DataBar Limited symbols not decoded as part of a Composite symbol. Scan Enable Convert GS1 DataBar to UPC/EAN/JAN to strip the leading '010' from DataBar-14 and DataBar Limited symbols encoding a single zero as the first digit, and report the bar code as EAN-13.

For bar codes beginning with between two and five zeros, this strips the leading '0100' and reports the bar code as UPC-A. The UPC-A Preamble option that transmits the system character and country code applies to converted bar codes. Note that neither the system character nor the check digit can be stripped.

**Enable Convert GS1 DataBar to UPC/EAN/JAN**



**Disable Convert GS1 DataBar to UPC/EAN/JAN\***



### 3.12.4 GS1 DataBar Security Level

The engine offers four levels of decode security for GS1 DataBar (GS1 DataBar-14, GS1 DataBar Limited, GS1 DataBar Expanded) bar codes.

- **Security Level 0** - The engine operates in its most aggressive state, while providing sufficient security decoding most in-spec bar codes.
- **Security Level 1** - This setting eliminates most misdecodes while maintaining reasonable aggressiveness.
- **Security Level 2** - Select this option with greater bar code security requirements if Security Level 1 fails to eliminate misdecodes
- **Security Level 3** - If you selected Security Level 2 and misdecodes still occur, select this security level to apply the highest safety requirements.

#### GS1 DataBar Security Level 0



#### GS1 DataBar Security Level 1\*



#### GS1 DataBar Security Level 2



#### GS1 DataBar Security Level 3



### 3.12.5 GS1 DataBar Limited Margin Check

The engine offers four levels of decode security for GS1 DataBar Limited bar codes. There is an inverse relationship between the level of margin check and engine aggressiveness. Increasing the level of margin check can reduce scanning aggressiveness, so select only the level of margin check necessary.

- **Margin Check Level 1** – No clear margin required. This complies with the original GS1 standard, yet can result in erroneous decoding of a DataBar Limited bar code when scanning some UPC symbols that start with digits 9 and 7.
- **Margin Check Level 2** – Automatic risk detection. This level of margin check can result in erroneous decoding of DataBar Limited bar codes when scanning some UPC symbols. If a misdecode is detected, the engine operates in Level 3 or Level 1.
- **Margin Check Level 3** – Margin check level reflects the newly proposed GS1 standard that requires a five times trailing clear margin.
- **Margin Check Level 4** – Security level extends beyond the standard required by GS1. This level of margin check requires a five times leading and trailing clear margin.

**GS1 DataBar Limited Margin Check Level 1**



**GS1 DataBar Limited Margin Check Level 2**



**GS1 DataBar Limited Margin Check Level 3\***



**GS1 DataBar Limited Margin Check Level 4**



### 3.12.6 GS1 DataBar Expanded Security Level

The engine offers four levels of decode security for GS1 DataBar Expanded bar codes.

- **Security Level 0** - The engine operates in its most aggressive state, while providing sufficient security decoding most in-spec bar codes.
- **Security Level 1** - This setting eliminates most misdecodes while maintaining reasonable aggressiveness.
- **Security Level 2** - Select this option with greater bar code security requirements if Security Level 1 fails to eliminate misdecodes.
- **Security Level 3** - If you selected Security Level 2 and misdecodes still occur, select this security level to apply the highest safety requirements.

#### GS1 DataBar Expanded Security Level 0



#### GS1 DataBar Expanded Security Level 1\*



#### GS1 DataBar Expanded Security Level 2



#### GS1 DataBar Expanded Security Level 3



## 3.13 Symbology-Specific Security Features

---

### 3.13.1 Redundancy Level

The engine offers four levels of decode redundancy. Select higher redundancy levels for decreasing levels of bar code quality.

As redundancy levels increase, the engine's aggressiveness decreases.

Scan one of the following bar codes to select the redundancy level appropriate for the bar code quality:

- **Redundancy Level 1** - The engine must read the following code types twice before decoding:
  - ◆ Codabar (8 characters or less)
  - ◆ MSI (4 characters or less)
  - ◆ D 2 of 5 (8 characters or less)
  - ◆ I 2 of 5 (8 characters or less)
- **Redundancy Level 2** - The engine must read all code types twice before decoding.
- **Redundancy Level 3** - The engine must read code types other than the following twice before decoding, but must read the following codes three times:
  - ◆ Codabar (8 characters or less)
  - ◆ MSI (4 characters or less)
  - ◆ D 2 of 5 (8 characters or less)
  - ◆ I 2 of 5 (8 characters or less)
- **Redundancy Level 4** - The engine must read all code types three times before decoding.

**Redundancy Level 1\***



**Redundancy Level 2**



**Redundancy Level 3**



**Redundancy Level 4**





 
### 3.13.2 Security Level

The engine offers four levels of decode security for delta bar codes, which include the Code 128 family, UPC/EAN/JAN, and Code 93. Select increasing levels of security for decreasing levels of bar code quality. There is an inverse relationship between security and engine aggressiveness, so choose only that level of security necessary for the application.

- Security Level 0** - The engine operates in its most aggressive state, while providing sufficient security decoding most in-spec bar codes.
- Security Level 1** - This default setting eliminates most misdecodes.
- Security Level 2** - Select this option if Security Level 1 fails to eliminate misdecodes
- Security Level 3** - If you selected Security Level 2 and misdecodes still occur, select this security level.

*Note: Selecting this option is an extreme measure against mis-decoding severely out-of-spec bar codes, and significantly impairs the decoding ability of the engine. If this level of security is required, try to improve the quality of the bar codes.*

**Security Level 0**



**Security Level 1\***



**Security Level 2**



**Security Level 3**



### 3.13.3 1D Quiet Zone Level

This feature sets the level of aggressiveness when decoding bar codes with a reduced quiet zone (the margin on either side of a bar code), and applies to symbologies enabled by a Reduced Quiet Zone parameter. Because higher levels increase the decoding time and risk of misdecodes, Zebra strongly recommends enabling only the symbologies which require higher quiet zone levels, and leaving Reduced Quiet Zone disabled for all other symbologies. Options are:

- 1D Quiet Zone Level 0** - The engine performs normally in terms of quiet zone.
- 1D Quiet Zone Level 1** - The engine performs more aggressively in terms of quiet zone.
- 1D Quiet Zone Level 2** - The engine only requires a quiet zone at the end of bar code for decoding.
- 1D Quiet Zone Level 3** - The engine decodes anything in terms of quiet zone or end of bar code.

**1D Quiet Zone Level 0**



**1D Quiet Zone Level 1\***



**1D Quiet Zone Level 2**



**1D Quiet Zone Level 3**



### 3.13.4 Intercharacter Gap Size

The Code 39 and Codabar symbologies have an intercharacter gap that is typically quite small. Due to various bar code printing technologies, this gap can grow larger than the maximum size allowed, preventing the engine from decoding the symbol. If this problem occurs, scan the **Large Intercharacter Gaps** parameter to tolerate these out-of-specification bar codes.

#### Normal Intercharacter Gaps\*



#### Large Intercharacter Gaps



 
## 3.14 Composite

---

### 3.14.1 Composite CC-C

Scan one of the following bar codes to enable or disable Composite bar codes of type CC-C.

**Enable CC-C**



**Disable CC-C\***



 
### 3.14.2 Composite CC-A/B

Scan one of the following bar codes to enable or disable Composite bar codes of type CC-A/B.

**Enable CC-A/B**



**Disable CC-A/B\***



### 3.14.3 Composite TLC-39

Scan one of the following bar codes to enable or disable Composite bar codes of type TLC-39.

Enable TLC39



Disable TLC39\*



### 3.14.4 Composite Inverse

Select an option to set Composite for either regular decode or inverse decode.

- **Regular Only** - The engine decodes regular Composite bar codes only. Before selecting this, set Inverse 1D to Regular Only or Inverse Autodetect.
- **Inverse Only** - The engine decodes inverse Composite bar codes only. This mode only supports Composite Inverse that includes DataBar combined with CCAB, and does not support other 1D/2D combinations. Before selecting this, first enable Composite CC-A/B , and set Inverse 1D to Inverse Only or Inverse Autodetect.

Regular Only\*



Inverse Only



### 3.14.5 UPC Composite Mode

Select an option for linking UPC symbols with a 2D symbol during transmission as if they were one symbol:

- **UPC Never Linked** –  
Transmit UPC bar codes regardless of whether a 2D symbol is detected.
- **UPC Always Linked** –  
Transmit UPC bar codes and the 2D portion. If 2D is not present, do not transmit the bar code
- **Autodiscriminate UPC Composites** –  
The engine determines if there is a 2D portion, then transmits the UPC, as well as the 2D portion if present.

 
**UPC Never Linked\***



**UPC Always Linked**



**Autodiscriminate UPC Composites**




## 3.15 Composite Beep Mode

---

Scan one of the following barcodes to select the number of decode beeps that sound upon decoding a Composite barcode.

 **Single Beep After Both are Decoded**



**Beep as Each Code Type is Decoded \***



**Double Beep After Both are Decoded**



## 3.16 GS1-128 Emulation Mode for UCC/EAN Composite Codes

---

Scan one of the following barcodes to enable or disable this mode.

**Enable GS1-128 Emulation Mode for UCC/EAN Composite Codes**



**Disable GS1-128 Emulation Mode for UCC/EAN Composite Codes \***

 


## 3.17 Korean 3 of 5

---

Scan one of the following barcodes to enable or disable Korean 3 of 5.

**Enable Korean 3 of 5**



**Disable Korean 3 of 5 \***





## 3.18 2D Symbologies

---

### 3.18.1 PDF417

Scan one of the following bar codes to enable or disable PDF417.

**Enable PDF417\***



**Disable PDF417**



### 3.18.2 MicroPDF417

Scan one of the following bar codes to enable or disable MicroPDF417.

**Enable MicroPDF417**



**Disable MicroPDF417 \***



### 3.18.3 Code 128 Emulation

Enable this parameter to transmit data from certain MicroPDF417 symbols as Code 128. You must enable AIM Code ID Character (1) for this parameter to work.

Enable Code 128 Emulation to transmit these MicroPDF417 symbols with one of the following prefixes:

JC1 if the first codeword is 903-905

JC2 if the first codeword is 908 or 909

JC0 if the first codeword is 910 or 911

Disable Code 128 Emulation to transmit these MicroPDF417 symbols with one of the following prefixes:

JL3 if the first codeword is 903-905

JL4 if the first codeword is 908 or 909

JL5 if the first codeword is 910 or 911

Scan one of the following bar codes to enable or disable Code 128 Emulation.

*Note: Linked MicroPDF codewords 906, 907, 912, 914, and 915 are not supported. Use GS1 Composites instead.*

#### Enable Code 128 Emulation



#### Disable Code 128 Emulation \*



### 3.18.4 Data Matrix

Scan one of the following bar codes to enable or disable Data Matrix.

**Enable Data Matrix\***



**Disable Data Matrix**



### 3.18.5 GS1 Data Matrix

Scan one of the following barcodes to enable or disable GS1 Data Matrix.

**Enable GS1 Data Matrix**



**Disable GS1 Data Matrix \***



### 3.18.6 Data Matrix Inverse

Scan one of the following bar codes to select the Data Matrix inverse decoder setting:

- **Regular Only** - The engine decodes regular Data Matrix bar codes only.
- **Inverse Only** - The engine decodes inverse Data Matrix bar codes only.
- **Inverse Autodetect** - The engine decodes both regular and inverse Data Matrix bar codes.

**Regular Only \***



**Inverse Only**



**Inverse Autodetect**



### 3.18.7 Decode Data Matrix Mirror Images

Scan one of the following bar codes to select an option for decoding mirror image Data Matrix bar codes:

- **Never** - Do not decode Data Matrix bar codes that are mirror images.
- **Always** - Decode only Data Matrix bar codes that are mirror images.
- **Auto** - Decode both mirrored and unmirrored Data Matrix bar codes.

**Never**



**Always**



**Auto\***



### 3.18.8 Maxicode

Scan one of the following bar codes to enable or disable Maxicode.

**Enable Maxicode**



**Disable Maxicode\***



### 3.18.9 QR Code

Scan one of the following bar codes to enable or disable QR Code.

*Note: Enabling this also enables QR Inverse, QR Mirrored, and Linked QR.*

**Enable QR Code\***



**Disable QR Code**



#### 3.18.9.1 GS1 QR

Scan one of the following barcodes to enable or disable GS1 QR.

**Enable GS1 QR \***



**Disable GS1 QR**



### 3.18.9.2 MicroQR

Scan one of the following barcodes to enable or disable MicroQR.

**Enable MicroQR \***



**Disable MicroQR**



### 3.18.9.3 Linked QR Mode

Scan one of the following barcodes to select a linked QR mode.

- **Linked QR Only** - Does not decode individual QRs from a set of linked QR codes.
- **Individual QR With Headers** - Decodes individual QRs from a set of linked QR codes and keeps the header information and data.
- **Individual QR No Headers** - Decodes individual QRs from a set of linked QR codes and just transmits data without header information.

**Linked QR Only \***



**Individual QR No Headers**



**Individual QR With Headers**





### 3.18.10 Aztec

Scan one of the following bar codes to enable or disable Aztec.

*Note: Enabling this also enables Linked Aztec.*

**Enable Aztec \***



**Disable Aztec**



### 3.18.11 Aztec Inverse

Scan one of the following bar codes to select the Aztec inverse decoder setting:

- Regular Only** - The engine decodes regular Aztec bar codes only.
- Inverse Only** - The engine decodes inverse Aztec bar codes only.
- Inverse Autodetect** - The engine decodes both regular and inverse Aztec bar codes.

**Regular Only**



**Inverse Only**



**Inverse Autodetect \***



### 3.18.12 Han Xin

Scan one of the following bar codes to enable or disable Han Xin.

**Enable Han Xin**



**Disable Han Xin \***



#### 3.18.12.1 Han Xin Inverse

Scan one of the following bar codes to select a Han Xin inverse decoder setting:

- **Regular Only** - The engine decodes Han Xin bar codes with normal reflectance only.
- **Inverse Only** - The engine decodes Han Xin bar codes with inverse reflectance only.
- **Inverse Autodetect** - The engine decodes both regular and inverse Han Xin bar codes.

**Regular Only\***



**Inverse Only**



**Inverse Autodetect**



### 3.18.13 Grid Matrix

Scan one of the following barcodes to enable or disable Grid Matrix.

Enable



Disable \*



### 3.18.14 Grid Matrix Inverse

Scan one of the following barcodes to select a Grid Matrix inverse decoder setting:

- **Regular Only** - The decoder decodes regular Grid Matrix barcodes only.
- **Inverse Only** - The decoder decodes inverse Grid Matrix barcodes only.
- **Autodiscriminate** - The decoder decodes both regular and inverse Grid Matrix barcodes.

Regular Only \*



Inverse Only



Autodiscriminate



### 3.18.15 Grid Matrix Mirror

Scan one of the following barcodes to select a Grid Matrix mirror decoder setting:

- Regular Only** - The decoder decodes regular Grid Matrix barcodes only.
- Mirrored Only** - The decoder decodes mirrored Grid Matrix barcodes only.
- Auto-discriminate** - The decoder decodes both regular and mirrored Grid Matrix barcodes.

#### Regular Only \*



#### Mirrored Only



#### Autodiscriminate



## 3.19 Macro PDF Features

Macro PDF is a special feature for concatenating multiple PDF symbols into one file. The engine can decode symbols encoded with this feature, and can store more than 64 Kb of decoded data from up to 50 MacroPDF symbols.

*CAUTION! When printing, keep each Macro PDF sequence separate, as each sequence has unique identifiers. Do not mix bar codes from several Macro PDF sequences, even if they encode the same data. When scanning a Macro PDF sequence, scan the entire sequence without interruption. When scanning a mixed sequence, two long low beeps (low / low) indicate an inconsistent file ID or inconsistent symbology error.*

### ● Macro PDF User Indications

User Scans	Passthrough All Symbols		Transmit Any Symbol in Set		Buffer All Symbols	
	Beep	T	Beep	T	Beep	T
Last Macro PDF in set	Decode Beep	Y	Decode Beep	Y	Decode Beep	Y
Any Macro PDF in set except last	Decode Beep	Y	Decode Beep	Y	2 Short Low	N
Macro PDF is not in current Set	Decode Beep	Y	2 Long Low	N	2 Long Low	N
Invalid formatted Macro PDF	Decode Beep	Y	2 Long Low	N	2 Long Low	N
Macro PDF from a set has already been scanned	Decode Beep	Y	4 Long Low	N	4 Long Low	N
Out of Macro PDF memory	N/A		3 Long Low	N	3 Long Low	N
Any non-Macro PDF scanned during a set	N/A	-	4 Long Low	N	4 Long Low	N
Flush Macro PDF	Low High	N	5 Long Low	N	5 Long Low	Y
Abort Macro PDF	High Low High Low	N	High Low High Low	N	High Low High Low	N

**Notes:**  
 1. The beep only sounds if the \*BEEPER\_ON signal is connected.  
 2. The column marked T indicates whether the symbol is transmitted to the host.  
 N = No transmission.

## 3.19.1 Macro PDF Transmit / Decode Mode

### Symbols

Select one of the following options for handling Macro PDF decoding. In Buffer All Symbols the decoder can handle sets of up to 50 maximum-sized Macro PDF symbols. In all other modes there is no limit to the size of the MacroPDF set.

•**Buffer All Symbols / Transmit Macro PDF When Complete:** This transmits all decode data from an entire Macro PDF sequence only when the entire sequence is scanned and decoded. Use the beeper and LED signals provided with the PL5000 when using this mode to ensure proper user feedback. If the decode data exceeds the limit of 50 symbols, there is no transmission because the entire sequence was not scanned. Use the parameter Flush Macro Buffer to purge the buffer.

•**Transmit Any Symbol in Set / No Particular Order:** This transmits data from each Macro PDF symbol as decoded, regardless of the sequence (although some error handling is performed; When selecting this mode, enable Transmit Macro PDF Control Header.

•**Passthrough All Symbols:** This transmits and decodes all Macro PDF symbols and performs no processing. In this mode the host is responsible for detecting and parsing the Macro PDF sequences.

Use this mode when the decoder's BEEPER\_ON signal is not used to drive a beeper (see the appropriate signal descriptions tables and the appropriate Imager Engine Signal Descriptions). In the other modes, some Macro PDF scanning sequences provide audible feedback only, so if BEEPER\_ON is not used no user feedback is provided. All actions marked No Transmission provide no feedback unless the BEEPER\_ON signal is used. By using Passthrough All Symbols mode every user decode is transmitted to the host where the host software can provide the appropriate feedback

**Buffer All Symbols / Transmit Macro PDF When Complete****Transmit Any Symbol in Set / No Particular Order****Passthrough All Symbols \***

### 3.19.2 Transmit Macro PDF Control Header

When enabled, this activates transmission of the control header, which contains the segment index and the file ID, in Macro PDF symbols. For example, the field may be: \92800000\725\120\343. The five digits after the \928 are the segment index (or block index), and \725\120\343 is the file ID.

**Enable Macro PDF Control Header Transmit \*****Disable Macro PDF Control Header Transmit**

### 3.19.3 Escape Characters

This enables the backslash (\) character as an Escape character for systems that can process transmissions containing special data sequences. Scan one of the following barcodes to either format special data according to the GLI (Global Label Identifier) protocol, or to disable this parameter. This parameter only affects the data portion of a Macro PDF symbol transmission; the Macro PDF Control Header (if enabled) is always sent with GLI formatting.

#### GLI Protocol



#### None \*



### 3.19.4 Flush Macro Buffer

Scan the following bar code to clear all currently-stored Macro PDF data in the buffer without transmission and abort from Macro PDF mode.

#### Flush Macro PDF Buffer





### 3.19.5 Abort Macro PDF Entry

Scan the following barcode to clear all currently stored Macro PDF data in the buffer without transmission and abort from Macro PDF mode.

**Abort Macro PDF Entry**



### 3.19.6 Postal Codes

Scan one of the following bar codes to enable or disable US Postnet.

**Enable US Postnet**



**Disable US Postnet\***



### 3.19.7 US Planet

Scan one of the following bar codes to enable or disable US Planet.

**Enable US Planet**



**Disable US Planet\***



### 3.19.8 Transmit US Postal Check Digit

Scan one of the following bar codes to select whether to transmit US Postal data, which includes both US Postnet and US Planet, with or without the check digit.

**Enable US Planet Transmit US Postal Check Digit\***



**Do Not Transmit US Postal Check Digit**



### 3.19.9 UK Postal

Scan one of the following bar codes to enable or disable UK Postal.

**Enable UK Postal**



**Disable UK Postal\***



### 3.19.10 Transmit UK Postal Check Digit

Scan one of the following bar codes to select whether to transmit UK Postal data with or without the check digit.

**Transmit UK PostalCheck Digit\***



**Do Not Transmit UK Postal Check Digit**



### 3.19.11 Japan Postal

Scan one of the following bar codes to enable or disable Japan Postal.

**Enable Japan Postal**



**Disable Japan Postal \***



### 3.19.12 Australia Post

Scan one of the following bar codes to enable or disable Australia Post.

**Enable Australia Post**



**Disable Australia Post\***



### 3.19.13 Australia Post Format

Scan one of the following bar codes to select a format for Australia Post:  
**Autodiscriminate (or Smart mode)** - Decode the Customer Information Field using the N and C Encoding Tables.

*NOTE : This option increases the risk of misdecodes because the encoded data format does not specify the Encoding Table used for encoding.*

- **Raw Format** - Output raw bar patterns as a series of numbers 0 through 3.
- **Alphanumeric Encoding** - Decode the Customer Information Field using the C Encoding Table.
- **Numeric Encoding** - Decode the Customer Information Field using the N Encoding Table.

**Autodiscriminate\*****Raw Format****Alphanumeric Encoding****Numeric Encoding**

### 3.19.14 Netherlands KIX Code

Scan one of the following bar codes to enable or disable Netherlands KIX Code.

**Enable Netherlands KIX Code**



**Disable Netherlands KIX Code\***



### 3.19.15 UPU FICS Postal

Scan one of the following bar codes to enable or disable UPU FICS Postal.

**Enable UPU FICS Postal**



**Disable UPU FICS Postal\***

 


## 3.20 DotCode


---

Scan one of the following barcodes to enable or disable DotCode.

**Disable DotCode \***



**Enable DotCode**

 

### 3.20.1 DotCode Inverse

Scan one of the following barcodes to select a DotCode Inverse decoder setting. Setting options are:

- Regular Only** - Decoder decodes DotCode barcodes with normal reflectance only.
- Inverse Only** - Decoder decodes DotCode barcodes with inverse reflectance only.
- Inverse Autodetect** - Decoder decodes both regular and inverse DotCode barcodes.

**Regular**



**Inverse Only**



**Autodetect \***



### 3.20.2 DotCode Mirrored

Scan one of the following barcodes to select a DotCode Mirror decoder setting:

- Non-Mirrored Only** - Digital decoder decodes non-mirrored DotCode barcodes only.
- Mirrored Only** - Digital decoder decodes mirrored DotCode barcodes only.
- Autodetect** - Digital decoder decodes both mirrored and non-mirrored DotCode barcodes.

 
**Never**



**Always**



**Autodetect \***



### 3.20.3 DotCode Prioritize

Enable DotCode Prioritize to give priority to DotCode decoding as compared to other symbologies.

**Disable**



**Enable \***





# Appendix A – ASCII Character Sets

## A-1 ASCII Character Set

ASCII Value (Prefix/Suffix Value)	Full ASCII Code 39 Encode Char	Keystroke	ASCII Character (Applies to RS-232 Only)
1000	%U	CTRL 2	NUL
1001	\$A	CTRL A	SOH
1002	\$B	CTRL B	STX
1003	\$C	CTRL C	ETX
1004	\$D	CTRL D	EOT
1005	\$E	CTRL E	ENQ
1006	\$F	CTRL F	ACK
1007	\$G	CTRL G	BELL
1008	\$H	CTRL H/ <b>BACKSPACE</b> <sup>1</sup>	BCKSPC
1009	\$I	CTRL I/ <b>HORIZONTAL TAB</b> <sup>1</sup>	HORIZ TAB
1010	\$J	CTRL J	LF/NW LN
1011	\$K	CTRL K	VT
1012	\$L	CTRL L	FF
1013	\$M	CTRL M/ <b>ENTER</b> <sup>1</sup>	CR/ENTER
1014	\$N	CTRL N	SO
1015	\$O	CTRL O	SI
1016	\$P	CTRL P	DLE
1017	\$Q	CTRL Q	DC1/XON
1018	\$R	CTRL R	DC2

ASCII Value (Prefix/Suffix Value)	Full ASCII Code 39 Encode Char	Keystroke	ASCII Character (Applies to RS-232 Only)
1019	\$S	CTRL S	DC3/XOFF
1020	\$T	CTRL T	DC4
1021	\$U	CTRL U	NAK
1022	\$V	CTRL V	SYN
1023	\$W	CTRL W	ETB
1024	\$X	CTRL X	CAN
1025	\$Y	CTRL Y	EM
1026	\$Z	CTRL Z	SUB
1027	%A	CTRL [	ESC
1028	%B	CTRL \	FS
1029	%C	CTRL ]	GS
1030	%D	CTRL 6	RS
1031	%E	CTRL -	US
1032	Space	Space	Space
1033	/A	!	!
1034	/B	"	"
1035	/C	#	#
1036	/D	\$	\$
1037	/E	%	%
1038	/F	&	&
1039	/G	'	'
1040	/H	(	(
1041	/I	)	)
1042	/J	*	*
1043	/K	+	+
1044	/L	,	,
1045	-	-	-
1046	.	.	.
1047	/o	/	/
1048	0	0	0
1049	1	1	1
1050	2	2	2
1051	3	3	3
1052	4	4	4
1053	5	5	5

ASCII Value (Prefix/Suffix Value)	Full ASCII Code 39 Encode Char	Keystroke	ASCII Character (Applies to RS-232 Only)
1054	6	6	6
1055	7	7	7
1056	8	8	8
1057	9	9	9
1058	/Z	:	:
1059	%F	;	;
1060	%G	<	<
1061	%H	=	=
1062	%I	>	>
1063	%J	?	?
1064	%V	@	@
1065	A	A	A
1066	B	B	B
1067	C	C	C
1068	D	D	D
1069	E	E	E
1070	F	F	F
1071	G	G	G
1072	H	H	H
1073	I	I	I
1074	J	J	J
1075	K	K	K
1076	L	L	L
1077	M	M	M
1078	N	N	N
1079	O	O	O
1080	P	P	P
1081	Q	Q	Q
1082	R	R	R
1083	S	S	S
1084	T	T	T
1085	U	U	U
1086	V	V	V
1087	W	W	W
1088	X	X	X

ASCII Value (Prefix/Suffix Value)	Full ASCII Code 39 Encode Char	Keystroke	ASCII Character (Applies to RS-232 Only)
1089	Y	Y	Y
1090	Z	Z	Z
1091	%K	[	[
1092	%L	\	\
1093	%M	]	]
1094	%N	^	^
1095	%O	-	-
1096	%W	'	'
1097	+A	a	a
1098	+B	b	b
1099	+C	c	c
1100	+D	d	d
1101	+E	e	e
1102	+F	f	f
1103	+G	g	g
1104	+H	h	h
1105	+I	i	i
1106	+J	j	j
1107	+K	k	k
1108	+L	l	l
1109	+M	m	m
1110	+N	n	n
1111	+O	o	o
1112	+P	p	p
1113	+Q	q	q
1114	+R	r	r
1115	+S	s	s
1116	+T	t	t
1117	+U	u	u
1118	+V	v	v
1119	+W	w	w
1120	+X	x	x
1121	+Y	y	y
1122	+Z	z	z
1123	%P	{	{
1124	%Q		
1125	%R	}	}
1126	%S	~	~
1127			Undefined
7013			ENTER

## A-2 ALT Key Character Set

---

ALT Keys	Keystroke
2064	ALT 2
2065	ALT A
2066	ALT B
2067	ALT C
2068	ALT D
2069	ALT E
2070	ALT F
2071	ALT G
2072	ALT H
2073	ALT I
2074	ALT J
2075	ALT K
2076	ALT L
2077	ALT M
2078	ALT N
2079	ALT O
2080	ALT P
2081	ALT Q
2082	ALT R
2083	ALT S

2084	ALT T
2085	ALT U
2086	ALT V
2087	ALT W
2088	ALT X
2089	ALT Y
2090	ALT Z

## A-3 GUI Key Character Set

---

GUI Key	Keystroke
3000	Right Control Key
3048	GUI 0
3049	GUI 1
3050	GUI 2
3051	GUI 3
3052	GUI 4
3053	GUI 5
3054	GUI 6
3055	GUI 7
3056	GUI 8
3057	GUI 9
3065	GUI A
3066	GUI B
3067	GUI C
3068	GUI D
3069	GUI E
3070	GUI F
3071	GUI G
3072	GUI H
3073	GUI I
3074	GUI J
3075	GUI K
3076	GUI L
3077	GUI M
3078	GUI N
3079	GUI O
3080	GUI P
3081	GUI Q
3082	GUI R
3083	GUI S
3084	GUI T
3085	GUI U
3086	GUI V
3087	GUI W
3088	GUI X
3089	GUI Y
3090	GUI Z

## A-4 PF Key Character Set

---

PF Keys	Keystroke
4001	PF 1
4002	PF 2
4003	PF 3
4004	PF 4
4005	PF 5
4006	PF 6
4007	PF 7
4008	PF 8
4009	PF 9
4010	PF 10
4011	PF 11
4012	PF 12
4013	PF 13
4014	PF 14
4015	PF 15
4016	PF 16

## A-5 F Key Character Set

---

F Keys	Keystroke
5001	F 1
5002	F 2
5003	F 3
5004	F 4
5005	F 5
5006	F 6
5007	F 7
5008	F 8
5009	F 9
5010	F 10

5011	F 11
5012	F 12
5013	F 13
5014	F 14
5015	F 15
5016	F 16
5017	F 17
5018	F 18
5019	F 19
5020	F 20
5021	F 21
5022	F 22
5023	F 23
5024	F 24



## A-6 Numeric Key Character Set

---

Numeric Keypad	Keystroke
6042	*
6043	+
6044	Undefined
6045	-
6046	.
6047	/
6048	0
6049	1
6050	2
6051	3
6052	4
6053	5
6054	6
6055	7
6056	8
6057	9
6058	Enter
6059	Num Lock

## A-7 Extended Key Character Set

---

Extended Keypad	Keystroke
7001	Break
7002	Delete
7003	Pg Up
7004	End
7005	Pg Dn
7006	Pause
7007	Scroll Lock
7008	Backspace
7009	Tab
7010	Print Screen
7011	Insert
7012	Home
7013	Enter
7014	Escape
7015	Up Arrow
7016	Dn Arrow
7017	Left Arrow
7018	Right Arrow

## Appendix B – Numeric Barcodes

### B-1 Cancel

---

To correct an error or change a selection, scan the bar code below.

Cancel



### B-2 Numeric Barcodes

---

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).

0



 
5



1



6



2



7



3



8



4



9





 





 















# Appendix C – Alphanumeric BarCodes

## C-1 Alphanumeric Barcodes

---

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).

Space	#
	
\$	%
	
*	+
	
-	.
	
/	!
	
“	&
	

'	(
	
)	:
	
;	<
	
=	>
	
?	@
	
[	\
	
]	^
	
_	`
	

*NOTE: Do not confuse the following bar codes with those on the numeric keypad.*

0



5



1



6



2



7



3



8



4



9



End of Message



Cancel



A



B



C



D



E



F



G



H



 
I



J



K



L



M



N



O



P



Q



R



S



T



U



V



W



X



Y



Z





a



b



c



d



e



f



g



h



i



j



k



l



m



n



o



p



q



r



s



t



u



v



w



x



y



z



{



|



}



~



# Appendix D – Programming Reference

## D-1 Symbol Code Identifiers

Code Character	Code Type
A	UPC-A, UPC-E, UPC-E1, EAN-8, EAN-13
B	Code 39, Code 32
C	Codabar
D	Code 128, ISBT 128, ISBT 128 Concatenated
E	Code 93
F	Interleaved 2 of 5
G	Discrete 2 of 5, or Discrete 2 of 5 IATA
H	Code 11
J	MSI
K	GS1-128
L	Bookland EAN
M	Trioptic Code 39
N	Coupon Code
R	GS1 DataBar Family
S	Matrix 2 of 5
T	UCC Composite, TLC 39
U	Chinese 2 of 5
V	Korean 3 of 5
X	ISSN EAN, PDF417, Macro PDF417, Micro PDF417
z	Aztec, Aztec Rune
P00	Data Matrix
P01	QR Code, MicroQR
P02	Maxicode
P03	US Postnet
P04	US Planet
P05	Japan Postal
P06	UK Postal
P08	Netherlands KIX Code
P09	Australia Post
P0A	USPS 4CB/One Code/Intelligent Mail
P0B	UPU FICS Postal
P0C	Mailmark
P0D	Grid Matrix, Grid Matrix Inverse, Grid Matrix Mirror
P0G	GS1 Data Matrix
P0H	Han Xin
P0Q	GS1 QR
P0X	Signature Capture

## D-2 AIM Code Identifiers

---

Each AIM Code Identifier contains the three-character string ]cm where:

] = Flag Character (ASCII 93)

c = Code Character

m = Modifier Character

### ■ Aim Code Characters

Code Character	Code Type
A	Code 39, Code 39 Full ASCII, Code 32
C	Code 128, ISBT 128, ISBT 128 Concatenated, GS1-128, Coupon (Code 128 portion)
d	Data Matrix, GS1 Data Matrix
E	UPC/EAN, Coupon (UPC portion)
e	GS1 DataBar Family
F	Codabar
G	Code 93
H	Code 11
h	Han Xin
I	Interleaved 2 of 5
L	PDF417, Macro PDF417, Micro PDF417
L2	TLC 39
M	MSI
Q	QR Code, MicroQR, GS1 QR
S	Discrete 2 of 5, IATA 2 of 5
U	Maxicode
z	Aztec, Aztec Rune
X	Bookland EAN, ISSN EAN, Trioptic Code 39, Chinese 2 of 5, Matrix 2 of 5, Korean 3 of 5, US Postnet, US Planet, UK Postal, Japan Postal, Australia Post, Netherlands KIX Code, USPS 4CB/One Code/ Intelligent Mail, UPU FICS Postal, Mailmark, Signature Capture
]g	Grid Matrix, Grid Matrix Inverse, Grid Matrix Mirror

## ■ Modifier Characters

The modifier character is the sum of the applicable option values.

Code Type	Option Value	Option
Code 39	0	No check character or Full ASCII processing.
	1	Reader has checked one check character.
	3	Reader has checked and stripped check character.
	4	Reader has performed Full ASCII character conversion.
	5	Reader has performed Full ASCII character conversion and checked one check character.
	7	Reader has performed Full ASCII character conversion and checked and stripped check character.
	Example: A Full ASCII barcode with check character W, <b>A+I+MI+DW</b> , is transmitted as <b>JA7AIMID</b> where 7 = (3+4).	
Trioptic Code 39	0	No option specified at this time. Always transmit 0.
	Example: A Trioptic barcode 412356 is transmitted as <b>JX0412356</b>	
Code 128	0	Standard data packet, no Function code 1 in first symbol position.
	1	Function code 1 in first symbol character position.
	2	Function code 1 in second symbol character position.
	Example: A Code (EAN) 128 barcode with Function 1 character <sup>FNC1</sup> in the first position, AIMID is transmitted as <b>JC1AIMID</b>	
I 2 of 5	0	No check digit processing.
	1	Reader has validated check digit.
	3	Reader has validated and stripped check digit.
	Example: An I 2 of 5 barcode without check digit, 4123, is transmitted as <b>JI04123</b>	
Codabar	0	No check digit processing.
	1	Reader has checked check digit.
	3	Reader has stripped check digit before transmission.
	Example: A Codabar barcode without check digit, 4123, is transmitted as <b>JF04123</b>	
Code 93	0	No options specified at this time. Always transmit 0.
	Example: A Code 93 barcode 012345678905 is transmitted as <b>JG0012345678905</b>	

Code Type	Option Value	Option
MSI	0	Check digits are sent.
	1	No check digit is sent.
	Example: An MSI barcode 4123, with a single check digit checked, is transmitted as <b>JM14123</b>	
D 2 of 5	0	No options specified at this time. Always transmit 0.
	Example: A D 2 of 5 barcode 4123, is transmitted as <b>JS04123</b>	
UPC/EAN	0	Standard data packet in full EAN format, i.e., 13 digits for UPC-A, UPC-E, and EAN-13 (not including supplemental data).
	1	Two digit supplemental data only.
	2	Five digit supplemental data only.
	3	Combined data packet comprising 13 digits from EAN-13, UPC-A or UPC-E symbol and 2 or 5 digits from supplemental symbol.
	4	EAN-8 data packet.
	Example: A UPC-A barcode 012345678905 is transmitted as <b>JE00012345678905</b>	
Bookland EAN	0	No options specified at this time. Always transmit 0.
	Example: A Bookland EAN barcode 123456789X is transmitted as <b>JX0123456789X</b>	
ISSN EAN	0	No options specified at this time. Always transmit 0.
	Example: An ISSN EAN barcode 123456789X is transmitted as <b>JX0123456789X</b>	
Code 11	0	Single check digit
	1	Two check digits
	3	Check characters validated but not transmitted.
GS1 DataBar Family		No option specified at this time. Always transmit 0. GS1 DataBar Omnidirectional and GS1 DataBar Limited transmit with an Application Identifier "01". <b>Note:</b> In GS1-128 emulation mode, GS1 DataBar is transmitted using Code 128 rules (i.e., J C1).
	Example: A GS1 DataBar Omnidirectional barcode 0110012345678902 is transmitted as <b>Je00110012345678902</b> .	
EAN.UCC Composites (GS1 DataBar, GS1-128, 2D portion of UPC composite)		Native mode transmission. <b>Note:</b> UPC portion of composite is transmitted using UPC rules.
	0	Standard data packet.
	1	Data packet containing the data following an encoded symbol separator character.
	2	Data packet containing the data following an escape mechanism character. The data packet does not support the ECI protocol.
	3	Data packet containing the data following an escape mechanism character. The data packet supports the ECI protocol.
		GS1-128 emulation <b>Note:</b> UPC portion of composite is transmitted using UPC rules.
1	Data packet is a GS1-128 symbol (i.e., data is preceded with J C1).	

Code Type	Option Value	Option
PDF417, Micro PDF417	0	Reader set to conform to protocol defined in 1994 PDF417 symbology specifications. <b>Note:</b> When this option is transmitted, the receiver cannot reliably determine whether ECIs have been invoked or whether data byte 92 <sub>DEC</sub> has been doubled in transmission.
	1	Reader set to follow the ECI protocol (Extended Channel Interpretation). All data characters 92 <sub>DEC</sub> are doubled.
	2	Reader set for Basic Channel operation (no escape character transmission protocol). Data characters 92 <sub>DEC</sub> are not doubled. <b>Note:</b> When decoders are set to this mode, unbuffered Macro symbols and symbols requiring the decoder to convey ECI escape sequences cannot be transmitted.
	3	The barcode contains a GS1-128 symbol, and the first codeword is 903-907, 912, 914, 915.
	4	The barcode contains a GS1-128 symbol, and the first codeword is in the range 908-909.
	5	The barcode contains a GS1-128 symbol, and the first codeword is in the range 910-911.
	Example: A PDF417 barcode ABCD, with no transmission protocol enabled, is transmitted as JL2ABCD.	
Data Matrix	0	ECC 000-140, not supported.
	1	ECC 200.
	2	ECC 200, FNC1 in first or fifth position.
	3	ECC 200, FNC1 in second or sixth position.
	4	ECC 200, ECI protocol implemented.
	5	ECC 200, FNC1 in first or fifth position, ECI protocol implemented.
	6	ECC 200, FNC1 in second or sixth position, ECI protocol implemented.

GS1 Data Matrix	2	ECC 200, FNC1 in first or fifth position.
MaxiCode	0	Symbol in Mode 4 or 5.
	1	Symbol in Mode 2 or 3.
	2	Symbol in Mode 4 or 5, ECI protocol implemented.
	3	Symbol in Mode 2 or 3, ECI protocol implemented in secondary message.
QR Code	0	Model 1 symbol.
	1	Model 2 / MicroQR symbol, ECI protocol not implemented.
	2	Model 2 symbol, ECI protocol implemented.
	3	Model 2 symbol, ECI protocol not implemented, FNC1 implied in first position.
	4	Model 2 symbol, ECI protocol implemented, FNC1 implied in first position.
	5	Model 2 symbol, ECI protocol not implemented, FNC1 implied in second position.
	6	Model 2 symbol, ECI protocol implemented, FNC1 implied in second position.
GS1 QR	3	Model 2 symbol, ECI protocol not implemented, FNC1 implied in first position.

Code Type	Option Value	Option
Aztec	0	Aztec symbol.
	C	Aztec Rune symbol.
Han Xin	0	Generic data, no special features are set. The transmitted data does not follow the AIM ECI protocol.
	1	ECI protocol enabled. There is at least one ECI mode encoded. Transmitted data must follow the AIM ECI protocol.
Grid Matrix, Grid Matrix Inverse, Grid Matrix Mirror	0	No options specified at this time. Always transmit 0.
Mailmark	0	No option specified at this time. Always transmit 0.